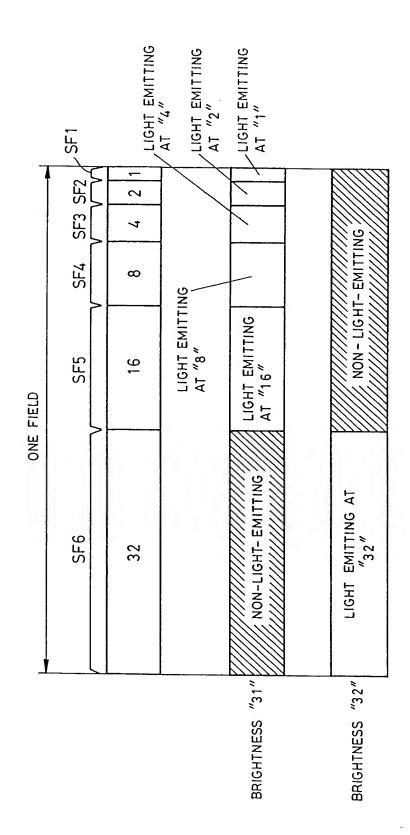
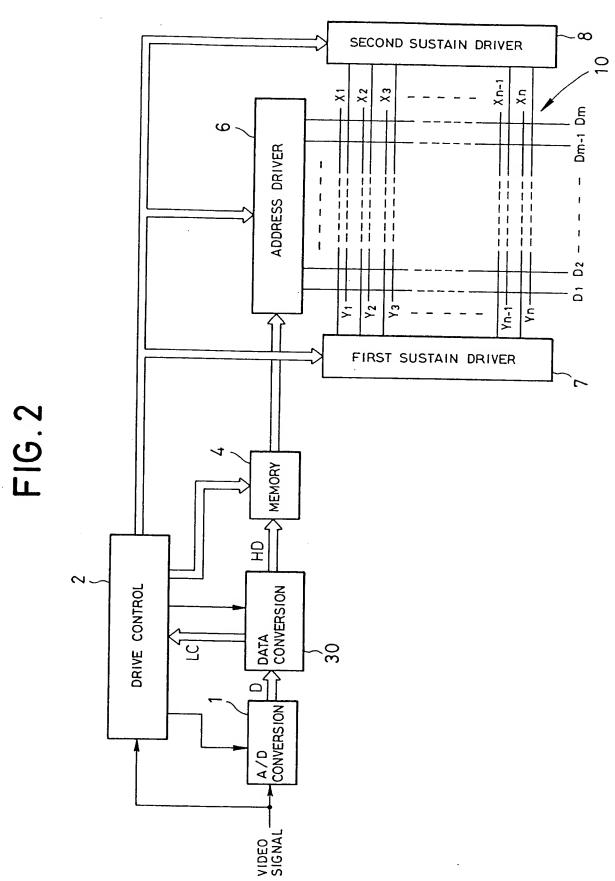
FIG. 1 PRIOR ART





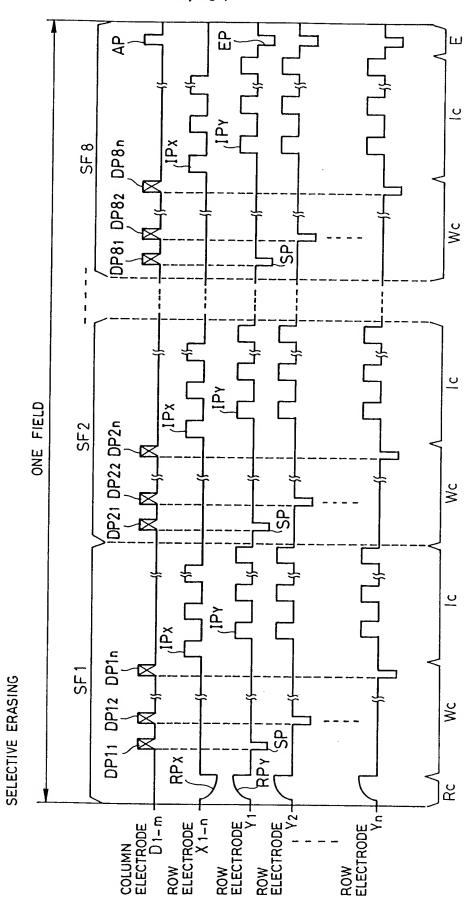


FIG.3

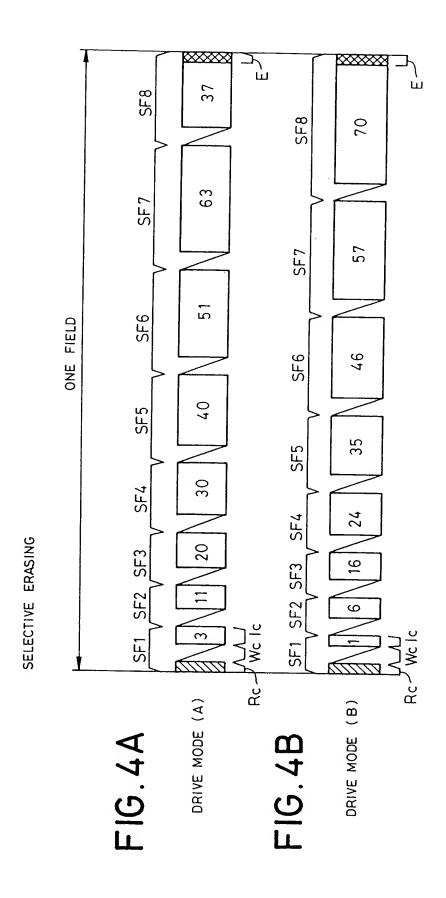


FIG.5

SELECTIVE ERASING

GRAY SCALE ~	-	S F 1	S F 2	S F 3	S F 4	S F 5	S F 6	S F 7	S F 8	LA	LB	BRIGHTNESS OF LIGHT-EMISSION
	1									0	0	
	2	0	•							3	1	
	3	\bigcirc	$\overline{\bigcirc}$	•						14	7	
	4	\bigcirc	$\overline{\bigcirc}$	\bigcirc	•					34	23	
·	5	\bigcirc	$\overline{\bigcirc}$	\bigcirc	$\overline{\bigcirc}$					64	47	
	6	\bigcirc	0	\bigcirc	0	\bigcirc				104	82	
	7	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	0			155	128	
	8	<u>O</u>	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	•	218	185	
	9	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	\bigcirc	0	255	255	

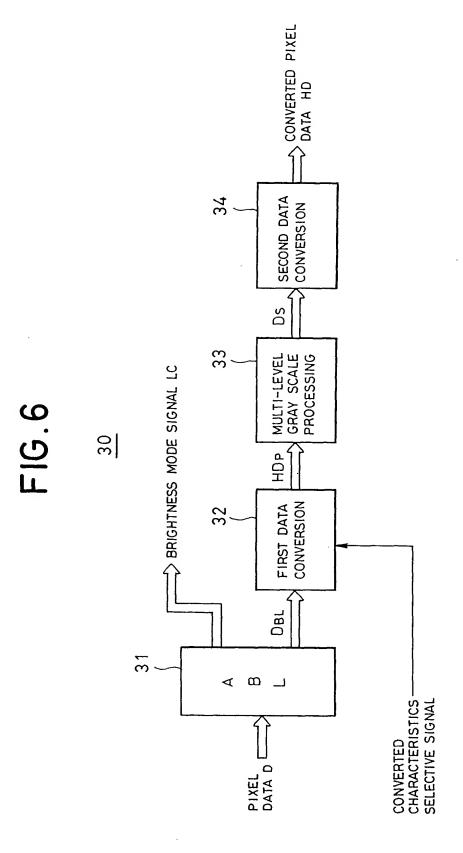


FIG.7

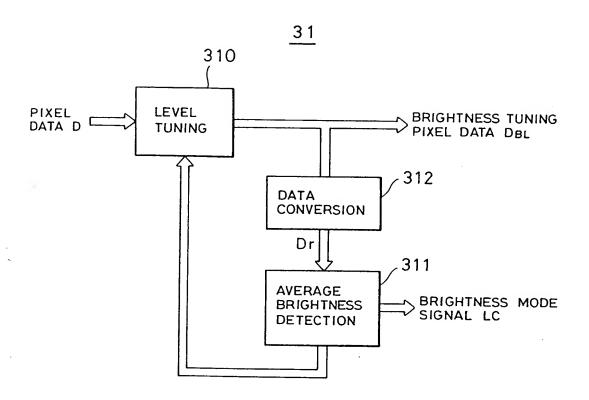


FIG.8

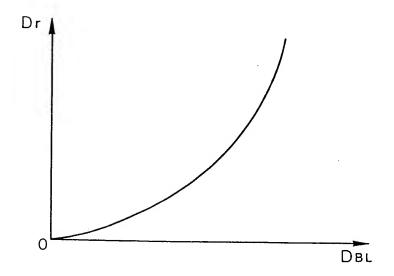


FIG.9A

DRIVE MODE (A)

LC	SF1	SF2	SF3	SF4	SF5	SF6	SF7	SF8
MODE 1	3	11	20	30	40	51	63	37
MODE 2	6	22	40	60	80	102	126	74
MODE 3	9	33	60	90	120	153	189	111
MODE 4	12	44	80	120	160	204	252	148

FIG.9B

DRIVE MODE (B)

	SF1	SF2	SF3	SF4	SF5	SF6	SF7	SF8
MODE 1	1	6	16	24	35	46	57	70
MODE 2	2	12	32	48	70	92	114	140
MODE 3	3	18	48	72	105	138	171	210
MODE 4	4	24	64	96	140	184	228	280

FIG.10

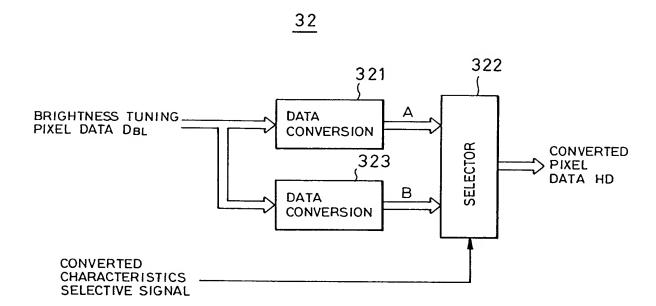


FIG.11


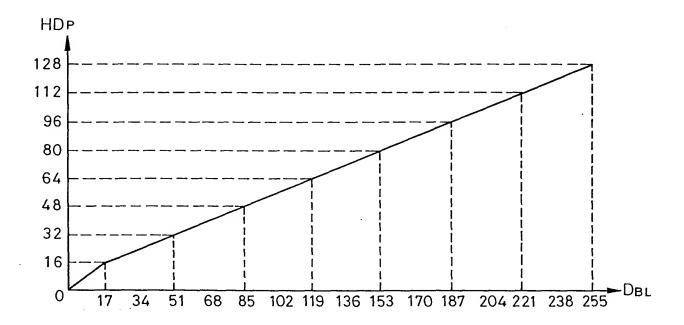


FIG.12

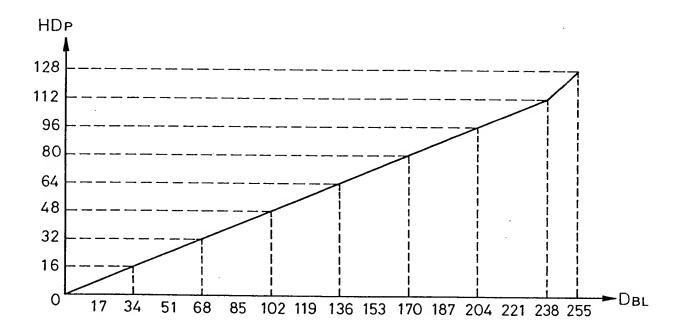

LEVEL	Dec	Α	i			, 	
	DBL	Α	В		DBL	A	В
0	00000000	00000000	00000000	64	01000000	00100110	00011110
1	00000001	00000000	00000000	65	01000001	00100110	00011110
2	00000010	00000001	00000000	66	01000010	00100111	00011111
3	00000011	00000010	00000001	67	01000011	00100111	00011111
4	00000100	00000011	00000001	68	01000100	00101000	00100000
5	00000101	00000100	00000010	69	01000101	00101000	00100000
6	00000110	00000101	00000010	70	01000110	00101000	00100000
7	00000111	00000110	00000011	71	01000111	00101001	001000001
8	00001000	00000111	00000011	72	01001000	00101001	00100001
9	00001001	00001000	00000100	73	01001001	00101010	00100001
10	00001010	00001001	00000100	74	01001010	00101010	00100010
11	00001011	00001010	00000101	75	01001011	00101011	00100010
12	00001100	00001011	00000101	76	01001100	00101011	00100011
13	00001101	00001100	00000110	77	01001101	00101100	00100011 00100100
14	00001110	00001101	00000110	78	01001110	00101100	00100100
15	00001111	00001110	00000111	79	01001111	00101101	
16	00010000	00001111	00000111	80	01010000	00101101	00100101 00100101
17	00010001	00010000	00001000	81	01010001	00101110	00100101
18	00010010	00010000	00001000	82	01010010	00101110	00100110
19	00010011	00010000	00001000	83	01010011	00101110	00100110
20	00010100	00010001	00001001	84	01010100	00101111	00100111
21	00010101	00010001	00001001	85	01010101		00100111
22	00010110	00010010	00001010	86	01010101	00110000	00101000
23	00010111	00010010	00001010	87	01010111	00110000	00101000
24	00011000	00010011	00001011	88		00110000	00101000
25	00011001	00010011	00001011		01011000	00110001	00101001
26	00011010	0001011	00001011	89	01011001	00110001	00101001
27	00011011	00010100		90	01011010	00110010	00101010
28	00011100	00010101	00001100	91	01011011	00110010	00101010
29	00011101	00010101		92	01011100	00110011	00101011
30	00011110	00010101	00001101	93	01011101	00110011	00101011
31	00011111	00010110	00001110	94	01011110	00110100	00101100
32	00100000	00010110	00001110	95	01011111	00110100	00101100
33	00100001	00010111	00001111	96	01100000	00110101	00101101
34	00100010	00010111	00001111	97	01100001	00110101	00101101
35	00100011	00011000	00010000	98	01100010	00110110	00101110
36	00100100	00011000	00010000	99	01100011	00110110	00101110
37	00100101	00011000	00010000	100	01100100	00110111	00101111
38	00100101	00011001	00010001	101	01100101	00110111	00101111
39	00100111	00011001	00010001	102	01100110	00111000	00110000
40	00101000	00011010	00010010	103	01100111	00111000	00110000
41	00101000	00011010	00010010	104	01101000	00111000	00110000
42	00101010	00011011	00010011	105	01101001	00111001	00110001
43	00101010		00010011	106	01101010	00111001	00110001
44	00101011	00011100	00010100	107	01101011	00111010	00110010
45	00101100	00011100	00010100	108	01101100	00111010	00110010
46	00101101	00011101	00010101	109	01101101	00111011	00110011
47	00101110	00011101	00010101	110	01101110	00111011	00110011
48	00101111	00011110	00010110	111	01101111	00111100	00110100
49		00011110	00010110	112	01110000	00111100	00110100
50	00110001	00011111	00010111	113	01110001	00111101	00110101
	00110010	00011111	00010111	114	01110010	00111101	00110101
51	00110011	00100000	00011000	115	01110011	00111110	00110110
52	00110100	00100000	00011000	116	01110100	00111110	00110110
53	00110101	00100000	00011000	117	01110101	00111111	00110111
54	00110110	00100001	00011001	118	01110110	00111111	00110111
55	00110111	00100001	00011001	119	01110111	01000000	00111000
56	00111000	00100010	00011010	120	01111000	01000000	00111000
57	00111001	00100010	00011010	121	01111001	01000000	00111000
58	00111010	00100011	00011011	122	01111010	01000001	00111001
59	00111011	00100011	00011011	123	01111011	01000001	00111001
60	00111100	00100100	00011100	124	01111100	01000010	00111001
61	00111101	00100100	00011100	125	01111101	01000010	00111010
62	00111110	00100101	00011101	126	01111110	01000011	00111010
63	00111111	00100101	00011101	127	01111111	01000011	00111011

128 10000000 01000100 00111100 192 11000000 01100010 0101101 129 11000001 01100010 0101110 130 10000010 01000101 00111101 131 10000011 01000101 00111101 134 11000010 01100011 0101101 131 10000101 0100011 00111101 135 11000010 10100011 0100110 0100111 133 10000101 01000110 00111110 135 11000010 01100100 010111 133 10000101 01000110 00111110 136 11000100 01100100 010111 133 10000101 01000111 00111110 137 11000100 01100100 010111 134 10000110 10000111 00111111 139 11000110 01100101 010111 135 10000101 01000011 0010111 0011111 135 10000101 01000000 1000000 200 11000010 0100100 01001000 1000000 200 11001000 0100110 0010111 137 10001001 01001000 01000000 200 11001000 0100110 0010111 139 10001011 0100100 01001000 01000000 202 11001000 0100110 0100111 139 10001101 01001000 01000000 202 11001010 01100111 010111 139 10001101 01001000 01000000 202 11001010 01100110 0100111 139 10001101 01001001 01000001 203 11001010 01100111 010111 140 1000110 01001001 01000001 204 11001100 01100110 0100111 141 10001101 01001010 01000001 205 11001101 01100100 0110000 142 10001101 01001010 01000001 205 11001101 01101000 0110000 143 10001101 01001010 01000001 205 11001101 01101000 0110000 144 10001010 01001010 01000001 205 11001101 01101000 0110000 144 10001010 01001010 01000001 205 11001101 01101000 0110000 144 10001010 01001010 01000001 207 11001110 01101000 0110000 110	LEVEL	DBL	Α	В		DBL	Α	В
129 10000001 01000100 00111100 193 11000001 01100010 010110133 10000010 01000101 00111101 194 11000010 01100011 01011033 10000101 01000110 001111101 195 11000010 01100010 0100111 133 10000100 01000110 001111101 195 11000100 01100100 0100111 134 10000110 01000111 001111101 197 11000100 01100100 010111 134 10000110 01000111 00111111 199 11000110 01100101 010111 135 10000110 01000111 00111111 199 11000111 01100101 010111 135 10000110 01000000 01000000 01000000 01001000 01001000 01001000 01001000 01001000 01100100 01100110					192			
130 10000010 01000101 00111101 194 11000010 01100011 0100110 132 10000110 01000110 00111110 196 11000110 01100110 0101110 133 10000110 10000110 00111110 196 11000100 01100100 010111 134 10000110 01000111 00111111 197 11000101 01100110 010111 135 10000111 01000111 00111111 198 11000111 01100110 010111 135 10000100 01001000 01000000 0000000 200 11001000 01100110 010111 137 10001001 01001010 01000000 200 11001000 01100110 010111 137 10001001 01001000 01000000 200 11001000 01100110 010111 138 10001001 01001010 01000000 200 11001000 01100110 010111 139 10001011 01001010 01000000 200 11001000 01100110 010111 139 10001011 01001010 01000000 200 11001000 01100110 010111 139 10001011 01001010 01000001 203 11001010 01100111 010111 139 10001011 01001010 01000001 203 11001010 01101010 0110000 142 10001110 01001010 01000010 206 11001110 01101000 0110000 142 10001110 01001010 01000010 206 11001110 01101000 0110000 143 10001111 01001011 01000011 207 11001111 01101000 0110000 144 10010000 01001010 01000101 208 11001111 01101001 0110000 145 10010001 01001100 01000101 208 11001010 01101001 0110000 145 10010010 01001100 01000100 209 11010001 01101001 0110000 146 10010010 01001100 01000100 209 11010001 01101001 0110000 146 10010010 01001100 01000100 209 11010001 01101001 0110000 147 1001001 01001100 01000100 209 11010001 0110101 0110010 110000 148 10010010 01001100 01000100 210 1101000 0110101			01000100					01011010
132 10000100 01000110 001111101 195 11000010 01100011 0100111 133 10000101 01000110 00111110 197 11000101 01100100 010111 134 10000110 01000111 00111111 198 11000110 01100101 011111 135 10000111 01000111 00111111 198 11000110 01100101 011011 135 10000111 01000111 00111111 198 11000110 01100110 010111 135 10001001 01001000 01000000 0000000 0000000 0000000 01001000 01100110								01011011
133 10000101 01000110 0111110 196 11000100 01100100 010111 134 10000110 01000111 00111111 197 11000110 01100101 010111 135 10000111 10000111 00111111 198 11000110 01100101 010111 136 10000100 0100100 01000000 200 11001000 01100110 010111 137 1000101 0100100 01000000 200 11001000 01100110 010111 138 10001010 01001000 01000000 200 11001000 01100110 010111 138 10001010 01001000 01000000 200 11001000 01100110 010111 139 10001011 01001010 01000000 202 11001010 01100111 010111 139 10001011 01001010 01000001 203 11001011 01100111 010111 139 10001011 01001010 01000001 203 11001011 01101011 0110111 141 10001101 01001010 01000001 205 11001101 0110100 0110000 142 10001101 01001010 01000001 206 11001101 01101000 0110000 143 10001111 01001011 01000011 207 11001111 01101000 0110000 144 10010000 01001101 01000011 208 11010000 0110100 0110000 146 10010001 0100110 01000101 208 11010000 0110100 0110000 146 10010001 01001100 01000101 208 11010000 0110100 0110000 146 10010001 0100110 01000101 208 11010000 0110101 0110000 146 10010010 01001100 01000101 209 11010001 01101010 0110000 146 10010010 01001100 01000101 209 11010000 01101010 0110010 110000 148 10010010 01001100 01000100 210 1101000 01101010 0110010 148 10010100 01001110 01000101 211 11010010 01101010 0110010 148 10010100 01001110 01000101 211 11010101 0110101 0110010 155 10010110 01001110 01000110 214 1101010 0110110 0110011 155 10010110 01001110 01001110 215 11011010 0110110 0110011 155 10011010 01001101 01001010 221 11011010 0110111 0110010 156 1001110 01001101 01001101 222 111001010 0110101 0110101 158 10011010 01001010 01001010 223 11100101 0110							01100011	01011011
134 10000110 01000111 00111111 198 11000110 0110010 010111 138 10001010 01001011 0111111 199 11000111 01100101 010111 138 10001000 01001000 01000000 200 11001000 01100110 010111 137 10001001 01001000 01000000 201 11001001 01100110 010111 138 10001010 01001000 01000000 201 11001001 01100110 010111 139 10001011 01001010 01000000 201 11001010 01100110 010111 139 10001011 01001010 01000001 203 11001010 01100101 100111 139 10001011 01001010 01000001 203 11001011 01100101 010111 140 1000110 01001010 01000001 204 11001100 01100000 141 10001101 01001010 01000001 206 11001101 01101000 0110000 144 10001101 01001010 01000001 206 11001101 01101000 0110000 143 10001111 01001011 01000011 207 11001111 01101000 0110000 144 10010000 01001011 01000001 208 11001011 01101000 0110000 144 10010000 01001011 01000011 208 11001001 0110100 0110000 146 10010001 0100110 01000100 209 11010001 0110101 0110000 146 10010010 01001100 01001100 209 11010001 0110101 0110000 147 10010011 0100110 01000100 210 1101001 0110101 0110001 148 10010100 01001101 01000101 211 11010010 0110010 0110010 148 10010101 01001110 01000110 213 11010101 0110101 0110010 150 1001101 01001110 01001110 155 10010110 01001111 01000110 213 11010101 0110110 0110010 155 10011010 01001111 01000110 217 11011010 0110110 11001 155 10011010 01001010 01001000 218 11011010 01101111 011001 155 10011011 01001010 01001000 218 11011010 01101111 011001 155 10011010 01001010 01001000 221 11011101 0110101 0110101 155 10011010 01001010 01001010 222 11011110 0110101 0110101 156 1001110 01001101 01001010 223 11001010 0110101 0110101 155 10011011 01001010 01001010 224								01011100
135 10000111 01000111 00111111 199 1100011 0110011 1010111 138 10001000 01001000 01000000 200 11001000 01100110 010111 138 10001010 01001000 01000000 201 11001000 01100110 010111 138 10001011 01001001 01000000 0202 11001010 01100111 010111 139 10001011 01001010 010000001 203 11001011 01100111 1010111 140 10001100 01001001 01000001 203 11001010 01101010 01101011 140 140 10001100 01001010 01000001 204 11001100 01101000 0110000 141 10001101 01001010 01000001 205 11001101 01101000 0110000 142 10001110 01001010 01000001 205 11001101 01101000 0110000 143 10001111 0100111 01000011 206 11001110 01101000 0110000 144 10010000 01001011 01000011 207 11001111 01101010 0110000 145 10010001 01001010 01000011 208 11010100 0110010 110000 145 10010001 01001101 01000011 208 11010000 0110010 110000 146 10010010 01001100 01000100 209 11010001 0110010 0110010 147 1001011 01001101 01000101 211 11010011 0110010 0110010 148 10010100 01001101 01000101 211 11010101 0110101 0110010 149 10010101 01001110 01000110 212 11010100 0110101 0110010 150 10010110 01001110 01000111 213 11010101 0110011 0110011 155 10010110 01001111 01000111 214 11010100 0110101 0110011 155 10010110 01001010 01001000 217 11011010 0110110 0110011 155 10011010 01010100 01001000 217 11011010 0110110 0110010 155 10011010 01010100 01001000 228 11011010 0110110 0110010 156 10011010 01001001 01001000 227 11001010 01101010 0110101 156 10011010 01001010 01001010 227 11100101 01101010 0110101 156 10011010 01001010 01001010 227 11100101 01101010 0110101 156 10011010 01001010 01001010 228 11100100 01110100 0110101 156 10010101 01001010 01001010 228 11100100								01011100
138 10001100 01001000 01000000 200 11001000 01100110 101011 137 10001001 01001000 01000000 201 11001000 01100110 010111 138 10001010 01001000 01000000 202 11001010 01100111 1010111 139 10001011 0100101 01000001 203 11001010 01101011 010111 139 10001011 0100101 01000001 203 11001010 01101001 0110101 1100111 139 10001011 0100101 01000001 204 11001100 01101000 11000 141 1000110 01001010 01000001 205 11001101 01101000 11000 142 10001110 01001010 01000010 205 11001101 01101000 011000 143 10001111 01001011 01000011 207 11001111 0110100 011000 144 10010000 01001011 01000011 208 11001010 0110000 144 10010000 01001011 01000011 208 11010000 0110010 144 10010000 01001010 01000010 209 11010000 0110100 145 10010010 01001100 01000100 209 11010000 0110100 110000 146 1001001 01001100 01000100 209 11010000 01101010 0110000 146 10010010 01001100 01000100 210 11010000 01101010 0110000 147 10010101 01001101 01000101 211 11010010 01101010 0110000 148 1001010 01001101 01000101 211 11010010 01101010 110000 148 1001010 01001101 01000101 211 11010010 01100101 151000 149 10010101 01001110 01000101 213 11010101 01100111 0110011 151 10010111 01001110 01000110 213 11010101 01100101 151001 151001011 01001110 01000110 213 11010101 0110110 0110010 152 10011000 0100110 213 11010101 0110110 0110011 151001 155 10011010 01010100 01001010 215 1101100 01101110 0110011 155 10011010 01001010 01001010 221 11011010 01101110 0110011 155 10011010 01001010 01001010 222 11011110 01101110 0110111 158 10011010 01001010 01001010 222 11001110 0110010 110010 155 10010101 01001010 01001010 223 11100100 0111000 0110101 155 10010101 0100101								01011101
137 10001001 01001000 01000000 201 11001001 01100110 0100111 138 10001010 01001000 01000000 202 11001010 01100111 1010111 139 10001011 01001001 01000001 203 11001010 011001011 1010111 140 10001100 01001001 01000001 204 11001100 01101000 0110000 141 10001101 01001010 01000001 205 11001101 01101000 0110000 142 10001110 01001010 01000010 205 11001101 01101000 0110000 142 10001111 01001011 01000010 206 11001110 01101000 0110000 143 10001111 01001011 01000011 207 11001111 01101000 0110000 144 10010000 0100111 01000011 207 11001111 01101001 110000 145 10010000 01001101 01000010 209 11010000 01101001 110000 145 10010001 01001100 01000100 209 11010001 01101010 0110000 146 10010010 01001100 01000100 209 11010001 01101010 0110000 147 10010011 01001101 01000101 211 11010010 01101010 0110000 148 10010100 01001101 01000101 211 11010010 01100101 0110000 149 1001010 01001101 01000101 213 1101010 01101011 0110001 150 10010110 01001110 01000110 213 1101010 01101010 0110010 150 1001011 01001111 01000111 215 11010110 0110011 0110011 152 10011000 01001111 01000111 215 11010111 0110011 0110011 155 10010110 01010000 01001000 218 11011010 01101110 0110011 155 10011010 01010000 01001000 218 11011010 01101110 0110011 155 10011010 01010000 01001000 220 11011110 0110011 011001 155 10011010 01010000 01001000 221 11011100 01101110 011001 156 10011100 01001000 01001000 221 11011100 0110101 0110101 156 10011100 01001010 01001010 222 11011110 01100101 1010101 156 10010101 01001010 01001010 222 11011110 0110101 0110101 156 10010101 01001010 01001010 223 11100100 0111000 0110101 156 10010101 01001010 01001010 223 11100100								01011101
138 10001010 01001000 01000000 202 11001010 01100111 010111 139 10001011 01001011 01000001 203 11001011 01100111 0100111 140 10001100 01001001 01000001 204 11001100 01101000 0110000 141 10001110 01001010 01000001 205 11001101 01101000 0110000 142 10001111 01001011 010000010 205 11001101 01101000 0110000 143 10001111 01001011 010000011 207 11001111 01101001 0110000 143 10001111 01001011 010000011 207 11001111 01101001 0110000 143 100010111 01001011 010000011 208 11001000 01101001 0110000 145 10010001 01001011 010000011 208 11010000 01101001 0110000 145 10010001 01001100 01000100 209 11010001 0110101 0110000 146 10010010 01001100 01000100 209 11010001 0110101 0110000 147 10010110 01000101 211 11010010 01100101 1010010 148 10010010 01001101 01000101 212 11010100 01101011 0110000 148 10010100 01001101 01000101 212 11010100 01101011 0110010 150 1001110 01001110 01000110 214 11010110 0110110 0110011 155 10010110 01001111 01000111 215 11010111 0110110 0110011 155 10011010 01001111 01000111 215 11010111 0110110 0110011 155 10011010 01001011 01000101 217 1101100 01101110 0110011 155 10011010 01001000 01001000 217 1101100 01101110 0110011 155 10011011 01100100 01001000 217 1101100 01101110 0110011 155 10011011 01100100 01001000 218 11011010 01101110 0110011 156 10011011 01100100 01001000 218 11011010 01101111 0110011 156 10011011 01100100 01001000 221 11011100 01101110 0110011 156 10011011 01100100 01001000 228 1100001 01101010 0110101 156 10010101 01001010 01001010 222 11011110 01101010 0110101 156 1010000 01001010 01001010 228 11100010 01110010 0110101 156 1010000 01001010 01001010 228 11100010 0111	137	10001001						
139 10001011 01001001 01000001 203 11001011 01101011 0110110 1110101 141 100011101 010010101 01000010 205 11001101 01101000 0110000 142 10001111 01001011 01000010 205 11001110 01101000 0110000 143 10001111 01000111 01000011 207 11001111 01101001 0110000 110000 144 10010000 01001011 01000011 208 11010000 01101001 144 10010000 01001010 01000010 209 11010001 01101001 0110000 145 10010010 01001100 01000100 209 11010001 01101010 0110000 146 10010010 01001100 01000100 210 11010010 01101010 0110000 147 10010011 01001101 01000101 211 11010010 01101010 0110001 148 10010100 01001101 01000101 212 11010100 01101011 0110000 149 10010110 01001101 01000110 213 1101010 01101010 0110010 150 10010111 01001111 01000110 213 1101010 01101100 0110011 150 10010111 01001111 01000111 215 11010111 01101100 0110011 155 10010110 01001111 01000111 215 11010111 01101100 0110011 155 10011000 01001111 01000111 216 11011000 01101101 0110011 155 10011010 01100100 01001000 218 11011010 01101110 0110011 155 10011010 01100100 01001000 218 11011010 01101110 0110011 155 10011011 01100100 01001000 218 11011010 01101111 0110011 156 10011101 01100100 01001000 218 11011010 01101111 0110011 156 10011010 01001000 01001000 218 11011010 01101111 0110011 156 10011010 01001000 01001000 221 11011100 01101111 0110011 156 10011111 0110010 01001010 222 11011110 01101111 0110011 156 10010100 01001000 223 11011111 01110101 0110101 156 10010101 0100101 0100101 223 11010100 01101010 0110101 158 10010111 01001011 0100101 0100101 228 11100000 0111001 0110101 156 10100101 01001010 01001010 223 11101010 01110010 0110101 156 10100101 01001010 01001010								
140 10001101 01001010 01000001 205 11001100 01101000 0110000 142 10001110 01001010 01000010 206 11001110 01101000 0110000 143 10001111 01001011 01000011 207 11001111 01101001 0110000 144 10010000 01001011 01000011 208 11010000 01101001 0110000 145 10010001 01001010 01000010 209 11010000 01101001 0110000 145 10010001 01001100 01000100 209 11010001 01101010 0110000 145 10010001 01001100 01000100 201 11010010 01101010 0110000 147 10010011 01001101 01000100 210 11010010 01101010 0110000 147 10010011 01001101 01000101 211 11010011 01101011 0110001 148 10010100 01001101 01000101 212 11010100 01101011 0110001 149 10010101 01001110 01000110 213 11010101 01101010 110010 150 10010110 01001111 01000110 214 1101010 01101100 0110011 155 10010110 01001111 01000111 216 1101010 01101100 0110011 152 10010100 01001111 01000111 216 11010100 01101101 0110011 153 10011001 01100000 01001000 217 1101100 01101110 0110011 155 10011011 01100000 01001000 218 11011010 01101110 0110011 155 10011011 01100000 01001000 218 11011010 01101111 0110011 155 10011101 01100100 01001000 218 11011010 01101111 0110011 156 10011101 01100100 01001000 228 11011101 01101111 0110011 156 10011101 01100100 01001000 228 11011010 01101111 0110011 156 10011101 01100100 01001001 222 11011110 01101111 0110010 156 10010110 01001010 01001010 222 11011110 0110010 0110101 158 10011101 01100101 01001010 01001010 223 11011100 01110010 0110101 158 10010110 01001010 01001010 226 11100001 0111001 0110010 158 10010101 01001010 01001010 226 11100010 0111001 0110010 110010 110010 110010 110010 110010 111001 111001 111001 111001 111011 111011 111011 111011				01000001	203	11001011		01011111
141 10001110 01001010 01000010 205 11001101 01101000 0110000 143 10001111 01001011 01000011 206 11001111 01101001 0110000 143 10001111 01001011 01000011 207 11001111 01101001 0110001 144 10010000 01001101 01000011 208 11010000 01101001 0110001 145 10010001 01001100 01000100 209 11010001 01101010 0110001 146 10010010 01001100 01000100 209 11010001 01101010 0110001 147 10010011 01001101 01000101 211 11010011 01101010 0110001 148 10010100 01001101 01000101 212 11010011 01101011 0110001 149 10010101 01001101 01000101 213 1101010 01101010 0110010 149 10010101 01001110 01000110 213 1101010 01101100 0110011 150 1001011 01001110 01000110 214 1101010 01101100 0110011 151 10010111 01001111 01000111 215 11010111 01101100 0110011 152 10011000 01001111 01000111 216 1101010 01101101 0110011 152 10011000 01001111 01001000 217 11011010 01101110 0110011 155 10011010 01010000 01001000 217 1101101 01101110 0110011 155 10011010 01010000 01001000 217 1101101 01101110 0110011 155 1001110 01010000 01001000 218 11011010 01101111 0110011 155 10011110 01010000 01001000 229 11011101 01101111 0110011 156 10011100 01010000 01001000 229 11011101 01101111 011001 155 10011110 01001001 01001001 220 11011100 01101111 0110010 155 10011110 01001001 01001001 220 11011100 01101111 0110100 156 10011110 0100101 0100101 220 11011100 01101111 0110101 156 10010100 01001010 221 1101110 01110100 0110101 156 10010100 01001010 223 1101110 01110100 0110101 156 1010000 01001010 022 1100000 01110000 0110101 156 1010000 01001010 022 1100000 01110000 0110101 156 1010000 0100101 023 1110001 0111001 0110101 156 1010010 01100101 0100101 023					_	11001100		01100000
143 10001111								01100000
1444 10010000 01001011 01000011 208 11010000 01101001 0110001 145 10010001 01001100 01000100 209 11010001 01101010 0110001 146 10010011 01001101 01100100 1101010 0110001 147 10010011 01001101 01000101 210 111010010 01101011 0110001 148 10010100 01001101 01000101 211 11010010 01101011 0110001 148 10010100 01001101 01000101 212 11010100 01101011 0110001 149 10010101 01001110 01000101 213 1101010 01101010 0110011 150 10010110 01001110 01000110 213 1101010 01101100 0110011 150 10010110 01001111 01000110 213 1101010 01101100 0110011 150 10010110 01001111 01000110 214 11010110 01101100 0110011 152 10011000 01001111 01000111 215 11010111 0110110 0110011 152 10011000 01001111 01000111 215 11010111 0110110 0110011 153 10011001 01010000 01001000 217 11011000 01101110 0110011 154 10011011 01100100 01001000 218 11011010 01101110 0110011 155 10011011 0110000 01001000 218 11011010 01101111 0110011 155 10011011 01010000 01001000 220 11011100 01101111 0110011 156 10011110 01010001 01001001 220 11011100 01101111 0110011 158 10011110 01001010 01001010 222 11011110 01110100 01101010 158 10011110 01001010 01001010 222 11011110 01110000 0110101 159 10011111 01001011 01001010 222 11011110 01110000 0110101 158 10011110 01001010 01001010 222 11011110 01110000 0110101 158 10011110 01001011 01001010 223 1100010 01110001 0110101 158 10010101 01001010 01001010 223 1100010 01110001 0110101 158 10100001 01001010 01001010 225 11100001 01110001 0110101 158 1010001 01001010 01001010 226 11100010 01110010 0110101 158 10100101 01001010 01001010 227 11100010 01110010 0110101 158 10100101 01100101 01001010 228 11100010 01110010							01101000	01100000
145 10010001 01001100 0100100 209 1101001 0110101 0110001 146 1001001 01001101 01000100 210 1101001 0110101 0110010 147 10010011 01001101 01000101 211 11010011 01101011 0110001 148 10010100 01001101 01000101 212 11010100 01101011 0110001 149 10010101 01001110 01000110 213 11010101 01101011 0110011 150 10010110 01001110 01000110 213 11010110 01101100 0110011 150 10010110 01001111 01000111 214 11010110 0110110 0110011 151 10010111 01001111 01000111 215 11010111 01101101 0110011 152 10011000 01001111 01000111 216 11010111 0110110 0110011 152 10011000 01001111 01000111 216 11011000 01101101 0110011 153 10011001 01010000 01001000 217 11011001 0110111 0110011 154 10011010 01010000 01001000 217 11011001 0110111 0110011 155 10011010 01010000 01001000 218 11011010 01101110 0110011 155 10011110 01010000 01001000 220 11011010 01101111 0110011 155 10011110 01010001 01001001 220 11011100 01101111 011001 157 10011110 01001001 01001001 221 11011110 011101000 0110101 158 10011111 01001010 01001010 222 11011110 01110100 0110101 159 10011111 01001010 01001010 223 11011111 01110000 0110101 160 10100000 01001011 01001011 224 11100000 01110001 0110101 161 10100010 01001010 026 11100010 01110010 1010101 166 10100010 01001101 01001101 228 11100100 01110010 0110010 166 10100010 01001101 026 1110010 01110101 166 10100101 01001101 01001101 228 11100100 01110011 1010111 177 10100101 01001101 01001010 238 11100110 01110101 0110111 177 10100101 01001101 01001010 238 11100101 01110101 0110110 177 10100101 01011010 0101001 238 11100101 01110101 0110101 177 1011001 01011010 01010010 238 11100101 01110110 0111010 177 1011					_			01100001
146		10010001						
147 10010011 01001101 01000101 211 11010011 0110010 110010 148 10010100 01001101 01000101 0122 11010100 01101011 0110000 149 10010101 01001110 01000110 213 11010101 01101010 0110010 150 10010110 01001110 01000110 214 11010110 01101100 0110011 151 10010111 01001111 01000111 215 11010111 0110110 0110011 151 10010111 01001111 01000111 215 11010111 0110111 0110011 152 10011000 01001111 01000111 216 11011000 01101110 0110011 153 10011001 01010000 01001000 217 11011001 01101110 0110011 154 10011010 011010000 01001000 218 11011010 01101111 0110011 155 10011010 01101010 0100000 01001000 218 11011010 01101111 0110011 155 10011011 01010000 01010000 219 11011010 01101111 0110011 156 10011101 01001001 01001001 220 11011100 01101111 011001 157 10011101 01001001 01001001 220 11011100 01101111 011001 157 10011101 01001010 01001001 222 11011110 01110000 0110101 158 10011111 01001010 01001010 223 11011111 01110000 0110101 159 10011111 01001010 01001010 223 11011111 01110000 0110101 160 10100000 01001011 01001011 225 11100001 01101001 161 10100001 01001011 01001011 225 11100001 01110001 0110101 163 10100010 01001101 01001101 226 11100010 01110010 0110101 165 1010010 01001101 01001101 228 11100101 0111001 0110101 166 10100110 01001101 01001101 228 11100101 01110011 0110101 166 10100101 01001101 01001101 230 11100110 01110011 0110111 171 1010101 01001111 01001110 230 11100110 01110011 0110111 171 1010101 01001010 01001010 235 11101010 01110101 0110111 171 1010101 01011010 01010100 235 11101010 01110101 0110111 177 1010001 01011010 01010010 236 11100101 01110101 0110111 177 1010001 01011010 01010001 237 11101010								
148	147					11010010		
149	148							
150								
151 10010111 01001111 01000111 215 11010111 0110110 0110011 153 10011001 0101000 01001000 217 11011001 01101110 0110011 154 10011010 01010000 01001000 218 11011010 01101110 0110011 155 10011011 01010000 01001000 218 11011010 01101111 0110011 155 10011011 0100000 01001000 219 11011010 01101111 0110011 155 10011011 0100000 01001001 220 11011100 01101111 0110011 157 10011101 01001001 01001001 220 11011100 01101011 0100101 157 10011101 01001001 01001001 221 11011101 01110000 0110101 158 10011110 01001010 01001001 222 11011110 01110000 0110101 159 10011111 01001010 01001010 222 11011110 01110000 0110101 159 10011111 01001010 01001010 223 11011111 01110000 0110101 160 10100000 0100101 01001011 224 11100000 01110001 0110101 161 10100001 01001011 01001011 225 11100001 01110001 0110101 162 10100010 01001101 01001101 226 11100010 01110010 0110101 163 10100011 01001101 01001101 228 11100010 01110010 0110101 164 10100100 01001101 01001101 229 11100101 01110011 0110101 166 10100101 01001101 01001101 229 11100101 01110011 0110101 166 10100110 01001101 01001101 230 11100100 01110011 0110110 166 10100110 01001111 01001111 230 11100100 01110101 0110111 170 1010111 0110111 0110111 170 1010101 0110111 0110111 170 170 1010101 01010101 01010101 230 11101010 01110110 0110111 170 1110111 0110111 170 170 170 1010101 01010101 01010100 235 11101010 01110111 0110111 170		10010110	01001110	01000110	214	11010110		01100100
152 10011000 01001111 01000111 216 11011000 01101101 0110011 153 10011010 01101000 01001000 217 11011001 01101110 0110011 155 10011011 01010000 01001000 218 11011010 01101111 0110011 155 10011011 01010000 01001000 219 11011011 01101111 0110011 155 10011101 01010001 01001001 01001001 220 11011100 01101111 0110011 157 10011101 01001001 01001001 01001001 221 11011100 01101111 0110011 157 10011101 01001010 01001010 01001010 222 11011110 01110000 0110101 158 10011110 01001010 01001010 0122 11011110 01110000 0110101 159 10011111 01001010 01001010 223 11011111 01110000 0110101 160 10100000 0100101 01001010 223 11101011 01110000 0110101 161 10100001 01001011 01001011 225 11100001 01110001 0110101 162 10100010 01001011 01001101 225 11100001 01110010 0110101 163 10100011 01001100 01001100 026 11100010 01110010 0110101 164 10100100 01001101 01001100 227 11100011 01110010 0110101 164 10100100 01001101 01001101 228 11100101 01110011 0110101 165 10100101 01001101 01001101 228 11100101 01110011 0110101 166 10100110 01001101 01001101 228 11100101 01110011 0110101 166 10100110 01001110 01001110 230 11100110 01110101 0110110 166 10100110 01001111 01001111 230 11100101 01110101 0110111 167 10101010 01001111 01001111 230 11100101 01110101 0110111 170 1010110 01001111 230 11100101 01110101 0110111 170 1010111 170 0101101 0101111 0101111 0101111 0101111 0110111 0110111 170 0110111 0110111 0110111 170 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 0110111 01101101 0110101 0110101 0110101 01110101 01110101 01110101 01110101						11010111	01101101	01100101
154 10011010 01010000 01001000 218 11011010 01101110 0110011 155 10011011 01010000 01001000 219 11011011 01101111 0110011 156 100111100 01010010 01001001 220 11011100 01101111 0110011 157 10011101 01001001 01001001 220 11011100 01101111 011001 157 10011111 01001010 01001001 221 11011101 01110000 0110101 158 10011110 01001010 01001010 222 11011110 01110000 0110101 159 10011111 01001010 01001010 223 11011111 01110000 0110101 160 10100000 01001011 01001011 224 11100000 0110001 0100101 161 10100000 01001011 01001011 225 11100001 0110010 0110101 162 10100010 01001100 01001100 225 11100011 01110010 0110101 163 10100011 01001100 01001100 227 11100011 01110010 0110101 164 10100100 01001101 01001101 228 11100101 01110010 0110101 165 10100101 01001101 01001101 229 11100101 01110011 0110101 166 10100110 01001101 01001101 229 11100101 01110011 0110101 166 10100110 01001111 01001101 230 11100110 01110110 0110111 167 10100111 01101111 01001111 230 11100110 0110110 0110111 168 10101001 01001111 01001111 233 11100101 0110101 0110111 170 1010101 01001111 01001111 233 11100101 0110101 0110111 170 1010101 01010111 01001111 233 11100101 0110101 0110111 170 1010101 01010100 01010000 234 11101010 01110101 0110111 171 1010101 01011000 01010000 235 11101011 01110101 0110111 170 1010101 0110100 0110001 238 11101111 0111010 0110111 175 10101111 01011000 01010001 238 11101111 01111000 0111001 176 1011001 01011001 0101001 238 11101101 01111010 0111001 176 1011001 0101001 239 11101111 01111001 0111001 176 1011001 01010101 245 11110010 01111010 0111001 180 1011001 01011010 245 11110010 01111011 0111011 180 1011010 01								01100101
155 10011011 01010000 01001000 219 11011011 01101111 011001 156 10011100 01010001 01001001 220 11011100 01101111 011001 157 10011101 01001001 01001001 221 11011101 01110000 0110101 158 10011111 01001010 01001010 222 11011101 01110000 0110101 159 10011111 01001010 01001010 223 11011111 01110000 0110101 160 10100000 01001011 01001011 224 11100000 01110001 0110101 161 10100001 01001011 01001011 225 11100001 01110001 0110101 162 10100010 01001101 01001100 226 11100011 01110010 0110101 163 10100011 01001100 01001100 227 11100011 01110010 0110101 164 10100100 01001101 01001101 228 11100101 01110011 011010 165 1010011 01001101 01001101 229 11100101 01110011 011010 166 10100110 01001101 01001101 229 11100101 01110011 011010 166 10100110 01001110 01001110 231 11100111 01110100 0110110 167 10100111 01001111 01001111 232 11100100 01110101 0110111 168 10101000 01010111 01001111 233 11100100 01110101 0110111 169 1010011 01001111 01001111 233 11101001 01110101 0110111 170 1010101 01011000 01010000 236 1110110 01110110 0110111 171 1010101 01011001 01010000 236 11101101 01110111 011011 173 10101101 01011001 01010010 239 11101110 01110111 0110111 174 10101101 01011001 01010010 239 11101110 01110111 0110111 175 10101111 01011011 01010010 239 11101110 01111010 0111010 176 10110010 01011001 01010010 240 1110000 01111001 0111001 177 10110001 01011011 01010010 240 11110010 01111001 0111001 178 10110110 01011101 01010101 245 11110010 01111011 0111010 180 1011010 01011101 01010101 246 11110110 01111011 0111011 182 10110110 01011101 01010101 246 11110110 01111011 0111011 182								01100110
156 10011100 0101001 01001001 220 11011100 01101111 011001 157 10011101 01001001 01001001 221 11011101 01110000 0110101 158 10011110 01001010 01001010 222 11011110 01110000 0110101 159 10011111 01001010 01001010 223 11011111 01110000 0110101 160 10100000 01001011 01001011 224 11100000 01110001 0110101 161 10100001 01001011 01001011 225 11100001 01110001 0110101 162 10100010 01001100 01001100 226 11100010 01110010 0110101 163 10100011 01001100 01001100 227 11100011 01110010 0110101 164 10100100 01001101 01001101 228 11100100 01110011 011010 165 10100101 01001101 01001101 229 11100101 01110011 011010 166 10100111 01001101 01001101 229 11100101 01110010 0110110 167 10100111 01001110 01001110 231 11100100 01110100 0110110 168 10101000 01010111 01001111 232 11100100 01110101 0110110 169 10101001 01010111 01001111 233 11101001 01110101 0110111 170 1010101 01011010 01010000 235 11101011 01110110 0110111 171 10101101 01011001 01010000 236 11101101 01110110 0110111 173 10101101 01011001 01010000 236 11101101 01110111 011011 174 10101101 01011001 01010001 238 11101101 01110111 011011 175 10101111 01011010 01010010 236 11101101 01110111 011011 176 1011000 01011001 01010001 237 11101011 01110111 011011 177 10110001 01011011 01010010 240 1110000 01111001 0111001 176 1011010 01011011 01010010 240 1110000 01111001 0111001 177 10110001 01011011 01010010 240 11110010 01111001 0111001 178 10110100 01011011 01010010 240 1110010 01111001 0111001 180 10110010 01011101 01010101 246 11110110 01111011 0111011 182 10110100 01011101 01010101 246 11110110 01111011 0111011 182								01100110
157 10011101 01001001 01001001 221 11011100 0110111 011000 0110101 158 10011110 01001010 01001010 0222 11011110 01110000 0110101 159 10011111 01001010 01001010 0223 11011111 01110000 0110101 160 10100000 01001011 01001010 223 11011111 01110000 0110101 160 10100000 01001011 01001011 224 11100000 01110001 0110101 161 10100001 01001011 01001011 225 11100001 01110001 0110101 162 10100010 01001100 01001100 226 11100010 01110010 0110101 163 10100011 01001100 01001100 227 11100011 01110010 0110101 164 10100100 01001101 01001101 228 11100100 01110011 0110101 165 10100101 01001101 01001101 229 11100101 01110011 0110101 166 10100110 01001101 01001101 229 11100101 01110011 0110101 166 10100110 01001110 01001110 230 11100110 01110101 0110110 167 10100111 01001110 01001110 231 11100111 01110100 0110111 168 10101000 0101111 01001111 232 11101000 01110101 0110111 169 10101001 01010111 01001111 233 11101010 01110101 0110110 170 10101010 01011010 01010000 234 11100101 01110101 0110111 172 10101001 01011000 01010000 234 11101010 01110110 0110111 173 10101101 01011001 01010000 235 11101010 01110111 0110111 174 10101101 01011001 01010000 236 11101100 01110111 0110111 174 10101101 01011001 01010001 238 11101100 01110111 0110111 175 101011111 01011010 01010010 239 11101111 01111100 0111001 175 101011111 01011011 01010010 240 1111000 01111001 0111001 176 10110001 01011011 01010010 240 1111000 01111001 0111001 177 10110001 01011011 01010010 240 1111001 01111001 0111001 179 1011001 01011011 01010101 240 1111001 01111001 0111001 179 10110011 01011101 01010101 246 11110100 01111011 0111011 111011 111011 111011 111011								01100111
158 10011110 01001010 01001010 222 11011110 01110000 0110101 159 10011111 01001010 01001010 223 11011111 01110000 0110101 160 10100000 01001011 01001011 224 11100000 0110001 0110101 161 10100001 01001011 01001011 225 11100001 0110001 0110101 162 10100010 01001100 01001100 226 11100011 01110010 0110101 163 10100011 01001100 01001100 226 11100011 01110010 0110101 163 10100011 01001101 01001101 228 11100011 01110010 0110101 164 10100100 01001101 01001101 228 11100100 011110011 0110101 165 10100110 01001101 01001101 229 11100101 01110011 0110101 166 10100110 01001101 01001101 230 11100110 01110101 0110101 167 10100111 01001110 01001110 231 11100111 01110100 0110111 168 10110000 0101111 01001111 232 11101000 01110101 0110111 168 10110000 01010111 01001111 232 11101000 01110101 0110111 169 10101001 01010111 01001111 233 11101001 01110101 0110111 171 1010101 01011010 01010000 234 11101010 01110101 0110111 172 10101100 01011000 01010000 235 11101101 0110110 0110111 172 10101100 01011000 01010000 236 11101101 01110111 0110111 173 1010110 01011001 01010001 237 11101101 01110111 011011 174 10101111 01011010 01010001 238 11101110 01110111 0110111 175 10101111 01011010 01010001 238 11101111 01111100 0111001 175 10101111 01011011 01010011 242 11110010 01111001 0111001 176 10110001 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011011 01010101 245 11110010 01111001 0111001 111001								
159 10011111		10011110					01110000	
160			01001010					01101000
162 10100010 01001100 01001100 226 11100010 01110010 011010 163 10100011 01001100 01001100 027 11100011 01110010 011010 164 10100100 01001101 01001101 01001101 228 11100100 01110011 011010 165 10100101 01001101 01001101 229 11100101 01110011 011010 166 10100110 01001110 01001110 230 11100110 01110100 0110110 167 10100111 01001110 01001110 230 11100110 01110100 0110110 168 10101000 0101111 01001111 231 11100101 01110100 0110111 168 10101000 01010111 01001111 232 11101000 01110101 0110111 169 10101010 01010111 01001111 233 11101000 01110101 0110111 170 10101010 01011010 0101000 234 11101000 01110110 0110111 171 10101011 01011000 01010000 235 11101101 01110110 0110111 172 10101100 01011000 01010000 236 11101100 01110111 0110111 173 10101101 01011001 01010001 237 11101100 01110111 0110111 174 10101101 01011001 01010001 238 11101110 01110111 0110111 175 10101111 01011010 01010001 238 11101111 01111100 0111001 175 10101111 01011010 01010010 239 11101111 01111100 0111001 176 10110000 01011011 01010011 240 11110000 01111001 0111001 178 10110010 01011011 01010011 241 11110001 01111001 0111001 179 1011001 01011011 01010101 243 11110011 01111010 0111011 180 1011010 01011010 01010100 244 11110010 01111010 0111011 180 1011010 01011011 01010101 245 11110011 01111011 0111011 111011 182 10110110 01011101 01010101 246 11110110 01111011 0111011 111011 111011 0111011 111011 111011 111011 111011 111011 111011 0111011 1110111 111011 111011 111						11100000		01101001
163 10100011 01001100 01001100 227 11100011 01110010 011010 164 10100100 01001101 01001101 228 11100100 01110011 011010 165 10100101 01001101 01001101 229 11100101 01110011 011010 166 10100110 01001110 01001110 230 11100110 01110100 011010 167 10100111 01010110 01001111 231 11100111 01110100 0110110 168 10101000 01010111 01001111 232 11101000 0111010 0110110 169 10101001 01010111 01001111 232 11101000 0111010 0110110 170 1010101 01011000 01010000 234 11101001 0110110 011011 171 1010101 01011000 01010000 235 1110101 0110111 011011 172 10101100 01011001 01010000								01101001
164 10100100 01001101 01001101 228 11100100 0111010 010101 165 10100101 01001101 01001101 228 11100100 01110011 011010 166 10100110 01001110 01001110 230 11100110 01110100 011011 167 10100111 01010110 01001110 231 11100111 0110100 0110110 168 10101000 01010111 01001111 232 11101000 0111010 0110110 169 10101001 01010111 01001111 233 11101001 0111010 011010 170 10101010 01011000 01010000 234 11101010 0111010 011011 171 1010101 01011000 01010000 235 11101011 0110111 011011 172 10101100 01011000 01010000 236 11101100 0111011 011011 173 10101101 01011001 01010001								01101010
165 10100101 01001101 01001101 229 11100101 0110011 011010 166 10100110 01001110 01001110 230 11100110 01110100 0110101 167 10100111 01010110 01001110 231 11100111 0110100 0110110 168 10101000 01010111 01001111 232 11101000 01110101 0110101 169 10101001 01010111 01001111 233 11101001 01110101 0110110 170 1010101 01011000 01010000 234 11101010 01110110 011011 171 1010101 01011000 01010000 235 11101011 01110110 011011 172 10101100 01011000 01010000 236 11101100 01110111 011011 173 10101101 01011001 01010001 237 11101101 01110101 0111000 175 10101111 01010101 239								01101010
166 10100110 01001110 01001110 230 11100110 01110100 0110110 167 10100111 01010110 01001110 231 11100111 01110100 0110110 168 10101000 01010111 01001111 232 11101000 01110101 0110110 169 10101001 01010111 01001111 233 11101001 01110101 0110110 170 1010100 01011000 01010000 234 11101010 01110110 0110110 171 1010101 01011000 01010000 235 11101011 01110110 0110111 171 10101010 01011000 01010000 236 11101101 01110111 0110111 172 10101100 01011000 01010000 236 11101100 01110111 0110111 173 10101101 01011001 01010001 237 11101101 01110111 0110111 174 10101110 01011001 01010001 238 11101110 01111010 0111001 175 10101111 01011010 01010010 239 11101111 01111000 0111000 176 10110100 01011010 01010010 240 1111000 01111000 0111000 177 10110001 01011011 01010011 241 11110000 01111001 0111001 178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011100 01010100 243 11110011 01111010 0111011 180 10110100 01011101 01010100 244 11110100 01111011 0111011 182 10110110 01011101 01010101 245 11110101 01111011 0111011 182 10110110 01011101 01010101 246 11110110 01111011 0111011 0111011								
167 10100111 01010110 01001110 231 11100111 01110100 0110110 168 10101000 01010111 01001111 232 11101000 01110101 0110110 169 10101001 01010111 01001111 233 11101001 01110101 0110110 170 1010101 01011000 01010000 234 11101010 01110110 0110110 171 1010101 01011000 01010000 235 11101011 01110110 0110111 172 10101100 01011000 01010000 236 11101100 01110111 011011 173 10101101 01011001 01010001 237 11101101 01110111 011011 174 10101110 01011001 01010001 238 11101110 01111010 0111010 175 10101111 01011010 01010010 239 11101111 01111000 0111000 176 10110000 01011010 01010010 240 11110000 01111000 0111000 177 10110001 01011011 01010011 241 11110001 01111001 0111001 178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011011 01010100 243 11110011 01111010 01111010 111001 180 10110101 01011101 01010101 245 11110101 01111011 0111011 182 10110110 01011101 01010101 246 11110110 01111011 0111011 0111011 0111	166	10100110						
168 10101000 01010111 01001111 232 11101000 01110101 0110110 169 10101001 01010111 01001111 233 11101001 01110101 0110110 170 10101010 01011000 01010000 234 11101010 01110110 011011 171 10101011 01011000 01010000 235 11101011 01110110 011011 172 10101100 01011000 01010000 236 11101100 01110111 011011 173 10101101 01011001 01010001 237 11101101 01110111 011011 174 10101110 01010010 238 11101110 01111000 0111000 175 10101111 01010101 239 11101111 0111000 0111000 176 10110000 01011010 01010010 240 11110000 0111100 0111000 177 10110001 01011011 01010011 241 11110000		10100111					01110100	
169					232			01101101
171 10101011 01011000 01010000 235 11101011 0110110 011011 172 10101100 01011000 01010000 236 11101100 01110111 011011 173 10101101 01011001 01010001 237 11101101 01110111 011011 174 10101110 01011001 01010001 238 11101110 01111000 0111001 175 10101111 01011010 01010010 239 11101111 01111000 0111000 176 10110000 01011010 01010010 240 11110000 01111000 0111000 177 10110001 01011011 01010011 241 11110000 01111001 0111000 178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011100 01010100 243 1110011 01111010 0111010 180 10110100 01011101 01010101 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>01101101</td>								01101101
172 10101100 01011000 01010000 236 11101100 0110111 011011 173 10101101 01011001 01010001 237 11101101 01110111 011011 174 10101110 01011001 01010001 238 1110110 01111000 0111000 175 10101111 01011010 01010010 239 11101111 01111000 0111000 176 10110000 01011010 01010010 240 11110000 01111000 0111000 177 10110001 01011011 01010011 241 11110000 01111001 0111000 178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011100 01010100 243 11110011 01111010 0111010 180 10110100 01011101 01010100 244 11110101 01111011 011101 181 10110110 01011101 01010101 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>01101110</td>								01101110
173 10101101 01011001 01010001 237 11101101 01110111 011011 174 10101110 01011001 01010001 238 11101101 01110101 0111001 175 10101111 01011010 01010010 239 11101111 01111000 0111000 176 10110000 01011010 01010010 240 11110000 01111000 0111000 177 10110001 01011011 01010011 241 11110001 01111001 0111000 178 10110010 01011011 01010011 242 1110010 01111001 0111001 179 10110011 01011100 01010100 243 1110011 01111010 0111010 180 10110100 01011101 01010100 244 11110100 01111011 011101 181 10110110 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>01101110</td>								01101110
174 10101110 01011001 01010001 238 11101110 01111000 0111000 175 10101111 01011010 01010010 239 11101111 01111000 0111000 176 10110000 01011010 01010010 240 11110000 01111000 0111000 177 10110001 01011011 01010011 241 11110001 01111001 011100 178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011100 01010100 243 1110011 01111010 0111010 180 10110100 01011100 01010100 244 11110100 01111011 011101 181 10110110 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 246 11110110 01111011 011101		10101100						01101111
175 10101111 01011010 01010010 239 11101111 01111000 0111000 176 10110000 01011010 01010010 240 11110000 01111000 0111000 177 10110001 01011011 01010011 241 11110001 01111001 0111001 178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011100 01010100 243 11110011 01111010 0111010 180 10110100 01011100 01010100 244 11110100 01111011 011101 181 10110101 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 246 11110110 01111011 011101								01101111
176 10110000 01011010 01010010 240 1111000 0111000 0111000 177 10110001 01011011 01010011 241 11110001 01111001 0111001 178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011100 01010100 243 11110011 01111010 0111010 180 10110100 01011100 01010100 244 11110100 01111010 0111010 181 10110101 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 246 11110110 01111011 011101							01111000	01110000
177 10110001 01011011 01010011 241 11110001 01111001 0111001 178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011100 01010100 243 11110011 01111010 011101 180 10110100 01011100 01010100 244 11110100 01111010 0111010 181 10110110 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 246 11110110 01111011 011101	176	10110000						
178 10110010 01011011 01010011 242 11110010 01111001 0111001 179 10110011 01011100 01010100 243 11110011 01111010 0111010 180 10110100 01011100 01010100 244 11110100 01111010 0111010 181 10110101 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 246 11110110 01111011 011101	177	10110001						
179 10110011 01011100 01010100 243 11110011 01111010 0111010 180 10110100 01011100 01010100 244 11110100 01111010 0111010 181 10110101 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 246 11110110 01111011 011101		10110010	01011011					01110010
180 10110100 01011100 01010100 244 11110100 01111010 0111010 181 10110101 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 246 11110110 01111011 011101		10110011		01010100				01110100
181 10110101 01011101 01010101 245 11110101 01111011 011101 182 10110110 01011101 01010101 246 11110110 01111011 011101		10110100	01011100	01010100	244	11110100	01111010	01110101
400 404044 0 401101							01111011	01110110
	183	10110110					01111011	01110111
194 10414000 01044440			01011110	01010110	247	11110111	01111100	01111000
195 40444004 0404444 0404444							01111100	01111001
196 4044040 0101110								01111010
187 10111011 01100000 01011000 251 11111011 0111110 011111	187						01111110	01111011
188 10111100 01100000 01011000 252 11111100 01111110 0111111		10111100	01100000	01011000		11111100		01111101
189 10111101 01100000 01011000 253 11111101 01111111 011111				01011000	253	11111101		01111110
190 10111110 01100001 01011001 254 11111110 01111111 011111			01100001			11111110	01111111	01111111
	[19.]	10111111	<u> </u>	01011001	255	11111111	10000000	10000000



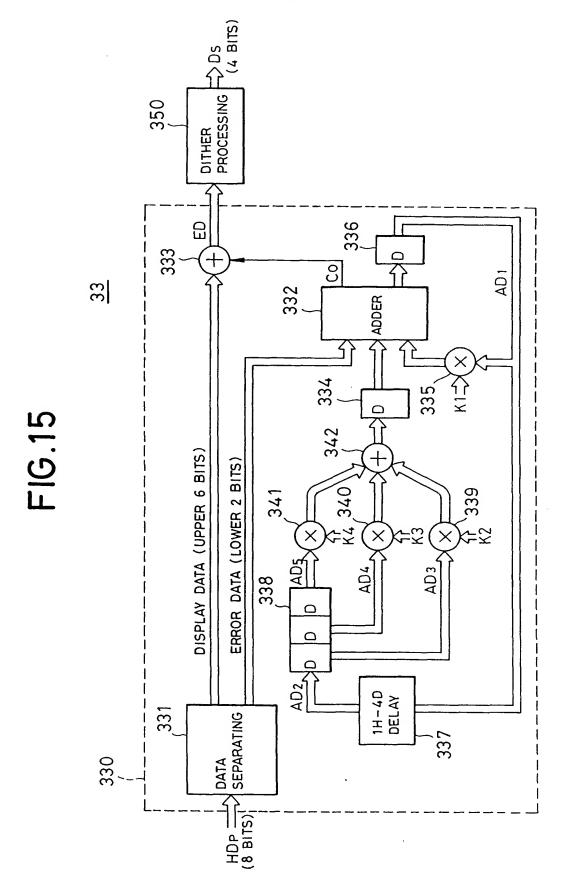


FIG.16

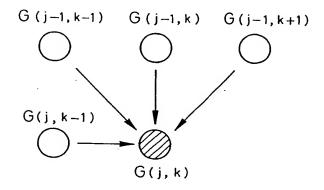

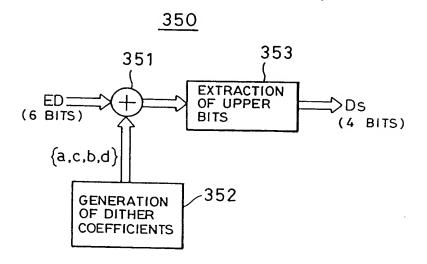

G(j+1,k) G(j+1,k+1)G(j,k) G(j,k+1) ڡ J ပ ൻ G(j+1,k) G(j+1,k+1) G(j,k) G(j,k+1) ര Δ $\boldsymbol{\sigma}$ G(j+1,k) G(j+1,k+1) G(j,k) G(j,k+1) U ര ٩ O G(j+1,k) = G(j+1,k+1)G(j,k+1) ۵ b G(j,k) ပ מ

F16.18

FOURTH FIELD

THIRD FIELD


SECOND FIELD


FIRST FIELD


F16.19

LIGHT-EMISSION BRIGHTNESS)											
LIGHT-EMISSI BRIGHTNESS)		LB	0	-	7	23	47	82	128	185	255
LIGH		LA	0	က	4	34	2	104	155	218	255
		SF SF SF 6 7 8		-						•	0
		₽ ~								0	
		R Θ							0	0	
		R S						0	0	0	0
	SION	유 사					\circ	0	0	0	
	LIGHT-EMISSION DRIVE PATTERN	SF SF SF SF 2 3 4 5				0	0	0	0	0	0
	ME HE	SF 2			0	0	0	0	0	0	
	LIG R	SF 1		0	0	0	\circ	0	0	\circ	
		8	0	0	0	0	0	0	0	-	0
		7	0	0	0	0	0	0	-	0	0
		ဖ	0	0	0	0	0		0	0	0
	웃	5	0	0	0	0		0	0	0	0
		4	0	0	0	~	0	0	0	0	0
NG		က	0	0	~	0	0	0	0	0	0
ZAS		7	0	-	0	0	0	0	0	0	0
田田田		_	_	0	0	0	0	0	0	0	0
SELECTIVE ERASING	Ds		0000	0001	0010	0011	0100	0101	0110	0111	1000
SE)		τ-	7	က	4	2	9	7	8	6
	GRAY SCALE										

BLACK CIRCLES: SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES: LIGHT-EMITTING STATE



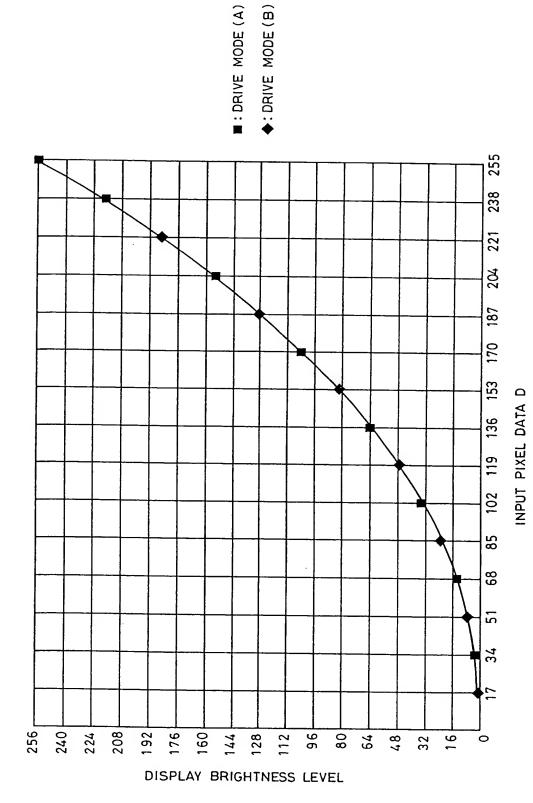

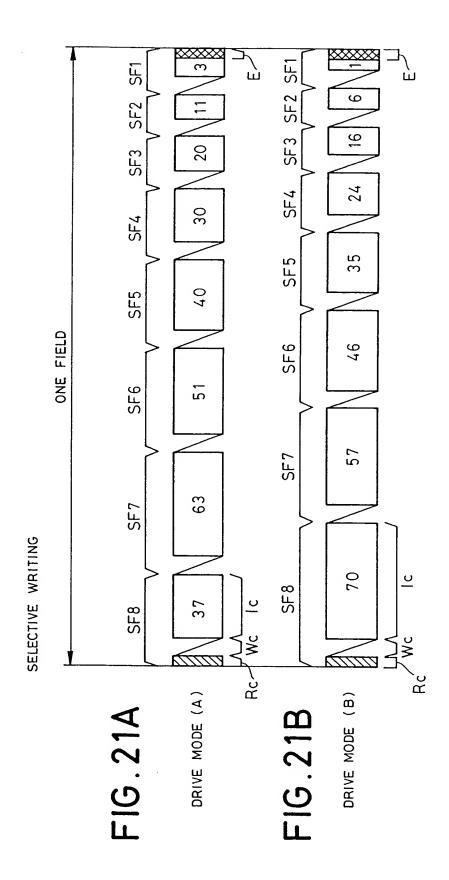

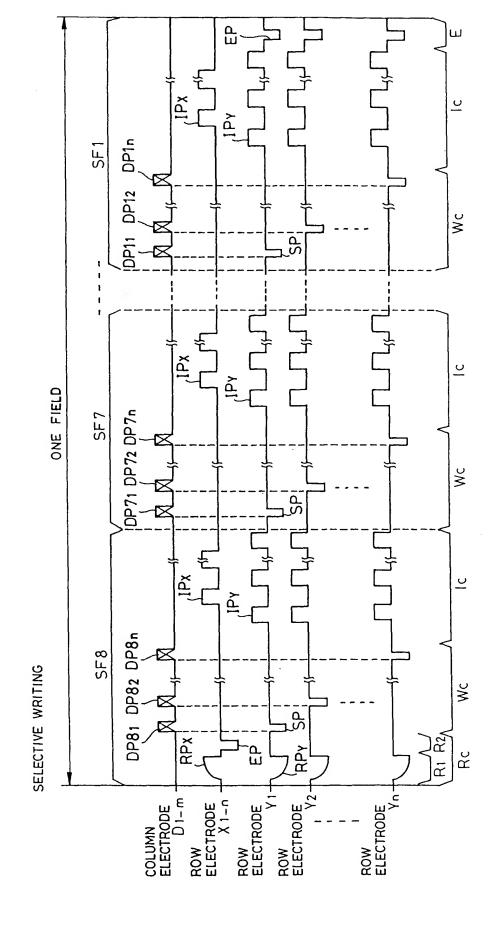



FIG.22


F16.23


	LIGHT-EMISSION BRIGHTNESS										
	7	LB	0	_	7	23	47	82	128	185	255
		LA	0	က	4	8	2	104	155	218	255
	LIGHT-EMISSION DRIVE PATTERN	SF		•	•	00	000	0000	00000	000000	0000000
		-	0	τ-	0	0	0	0	0	0	0
		2	0	0	←	0	0	0	0	0	0
		က	0	0	0	~	0	0	0	0	0
	모	4	0	0	0	0	~	0	0	0	0
	_	5	0	0	0	0	0	_	0	0	0
ITING		9	0	0	0	0	0	0	~~	0	0
표		7	0	0	0	0	0	0	0	~	0
<u>У</u>		8	0	0	0	0	0	0	0	0	-
SELECTIVE WR	Č	3	0000	0001	0010	0011	0100	0101	0110	8 0111	1000
SEI			7	7	က	4	2	9	7	8	6
	GRAY SCALE										


BLACK CIRCLES : SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES : LIGHT-EMITTING STATE




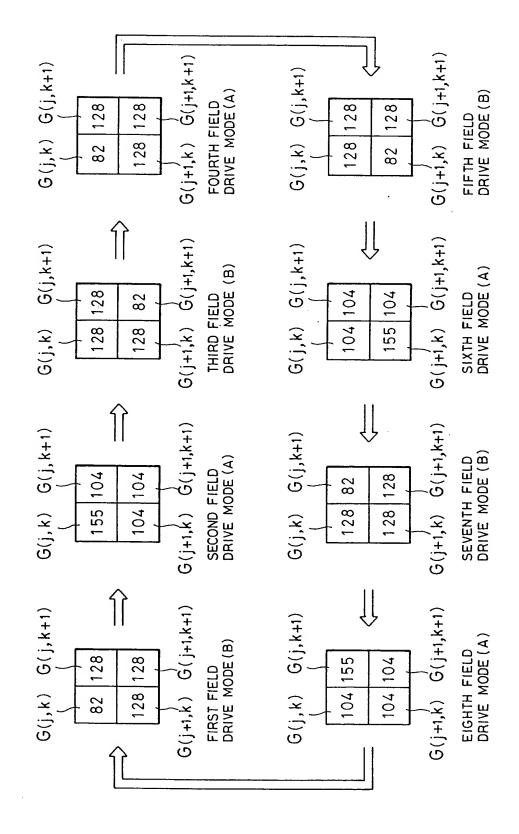


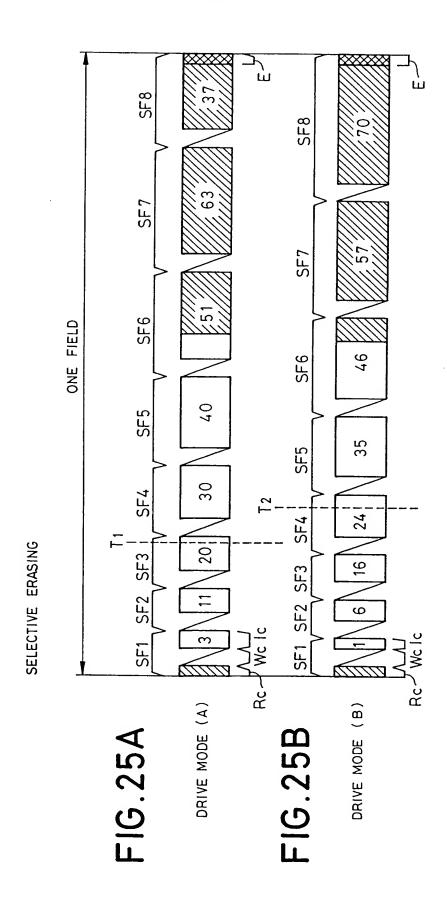

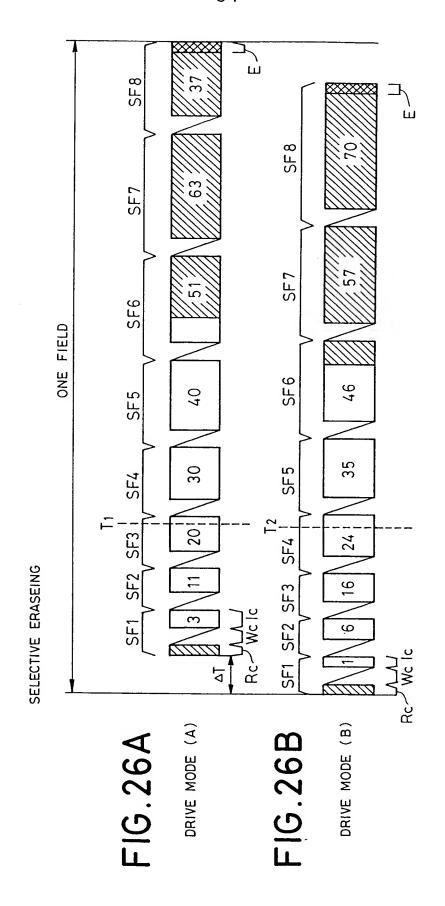

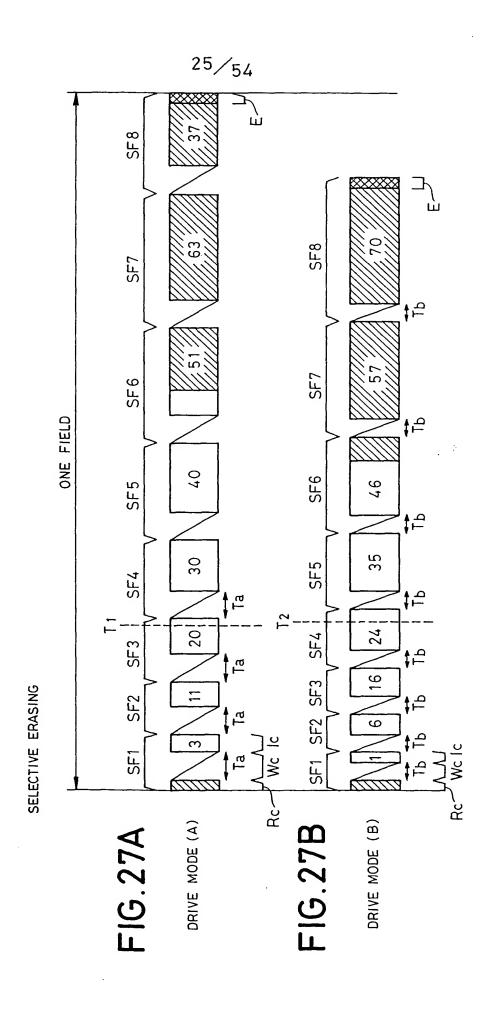

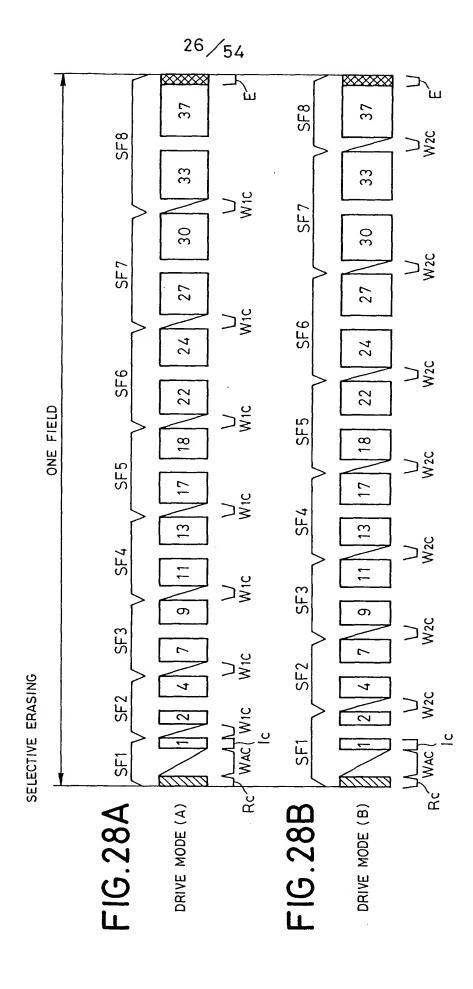

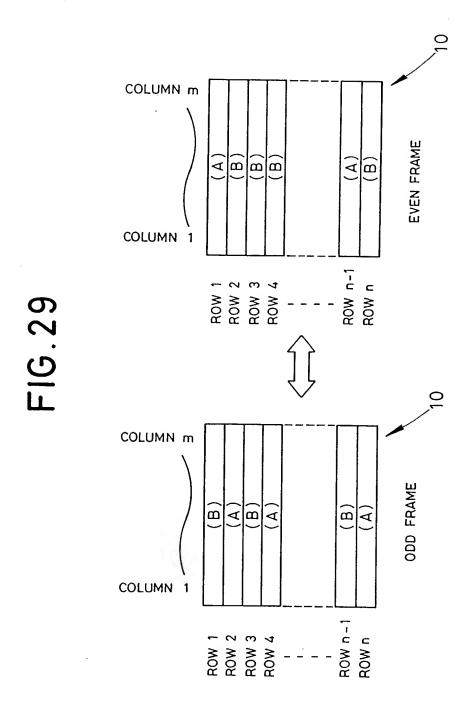

ELECTIVE ERASING	
rive era:	
rive era:	
4 4 1	

LIGHT-EMISSION BRIGHTNESS											
(LB	0	~	7	23	47	82	128	185	255
		LA	0	က	4	32	22	104	155	218	255
	SF	8	\triangleleft	\triangleleft	\triangleleft	\triangleleft	\triangleleft	\triangleleft		•	0
	SF	7	\triangleleft	\triangleleft	\triangleleft	\triangleleft	\triangleleft		lacktriangle	\bigcirc	
	SF	ဖ	\triangleleft	\triangleleft	\triangleleft	\triangleleft	lacktriangle	lacktriangle	\circ	\bigcirc	
ZZ	SF		\triangleleft	\triangleleft	\triangleleft	lacktriangle	lacktriangle	\circ	\circ	\bigcirc	
LIGHT-EMISSION DRIVE PATTERN	SF	4	\triangleleft	\triangleleft	lacktriangle	lacktriangle	\bigcirc	\bigcirc	\bigcirc	\bigcirc	
	SF	က	\triangleleft	lacktriangle		0	0	\bigcirc	0	0	
보기	SF	7			0	\circ	0	0	0	0	
2 2 2 2 3	SF	-		0	0	\circ	0	\bigcirc	0	0	
	_	8	*	*	*	*	*	*	-	-	0
		7	*	*	*	*	*	-	_	0	0
		9	*	*	*	*			0	0	0
_ 		2	*	*	*	-	~	0	0	0	0
운		4	*	*	_	_	0	0	0	0	0
		က	*		_	0	0	0	0	0	0
		2	-	_	0	0	0	0	0	0	0
		-	-	0	0	0	0	0	0	0	0
ć	รั -		0000	0001	0010	0011	0100	0101	0110	0111	1000


BLACK CIRCLES: SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES: LIGHT-EMITTING STATE

F16.31

SELECTIVE WRITING

LIGHT-EMISSION BRIGHTNESS										
7	LB	0	<u>_</u>	7	23	47	82	128	185	255
	۲	0	က	14	34	64	104	155	0 218	0 255 255
,	۲ ۲		•	•	0	0	0	0	0	0
Ü	4 3 2 1					0	0	0	0	O
6	<u>ე</u> ო						0	0	0	0
N N N	24						•	0	0	0
IISSI TTEF	2 2 2 3								0	0
T-EM E PA	, w		•							0
LIGHT-EMISSION DRIVE PATTERN SE SE SE SE	5 C									
	←	0	-	_	*	*	*	*	*	*
	7	0	0	~	←	*	*	*	*	*
	က	0	0	0	-	, τ	*	*	*	*
모	5 4	0	0	0	0	-	_	*	*	*
-		0	0	0	0	0	-	~	*	*
	9	0	0	0	0	0	0	_	~	*
	7	0	0	0	0	0	0	0	~	
	∞	0	0	0	0	0	0	0	0	_
OS		0000	000	0010	0011	0100	0101	0110	0111	1000

BLACK CIRCLES: SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES: LIGHT-EMITTING STATE

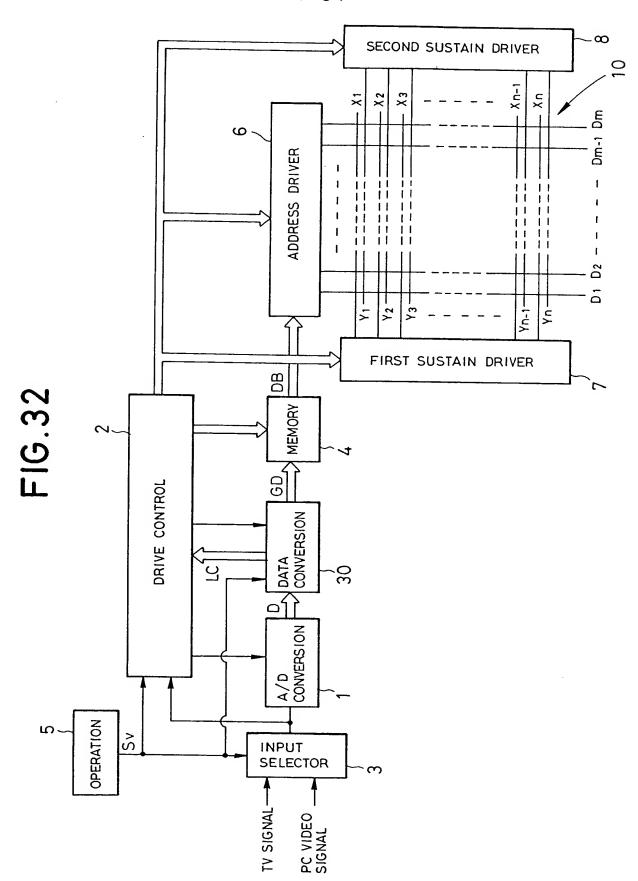

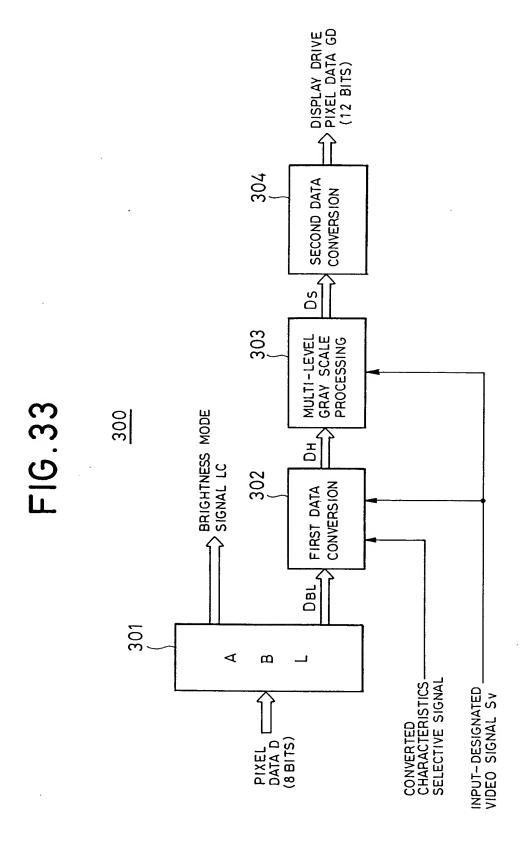


FIG.34

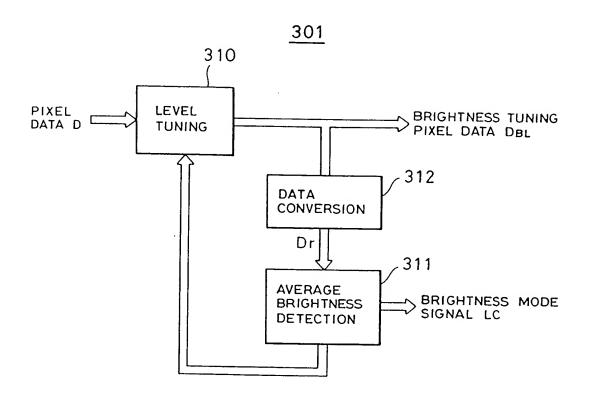
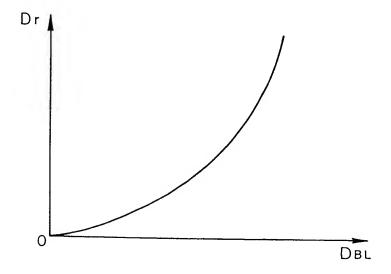


FIG.35



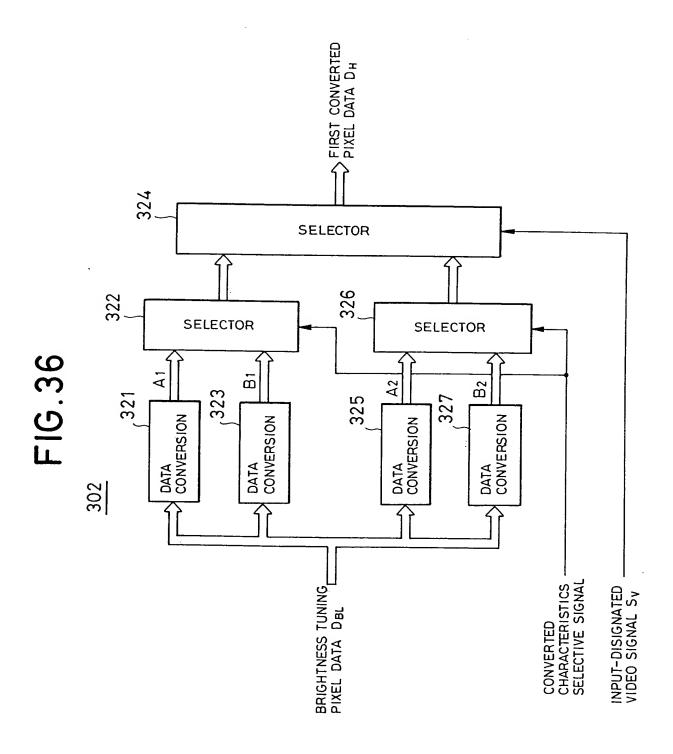


FIG.37A

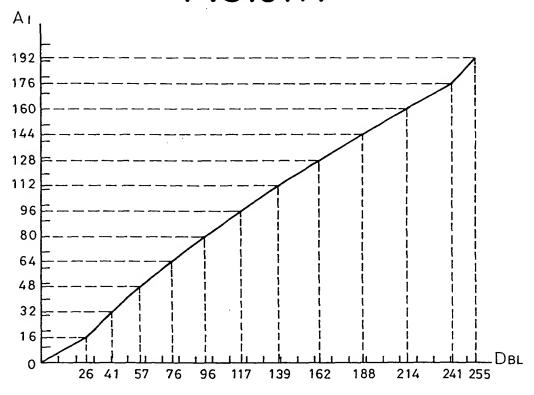
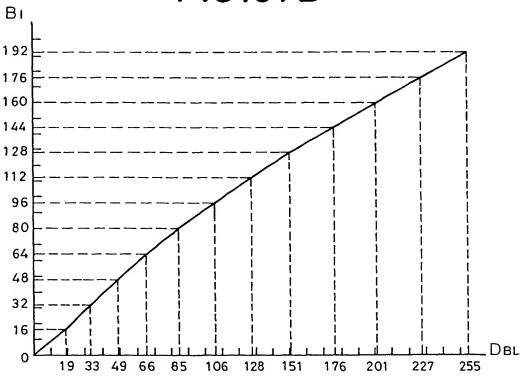
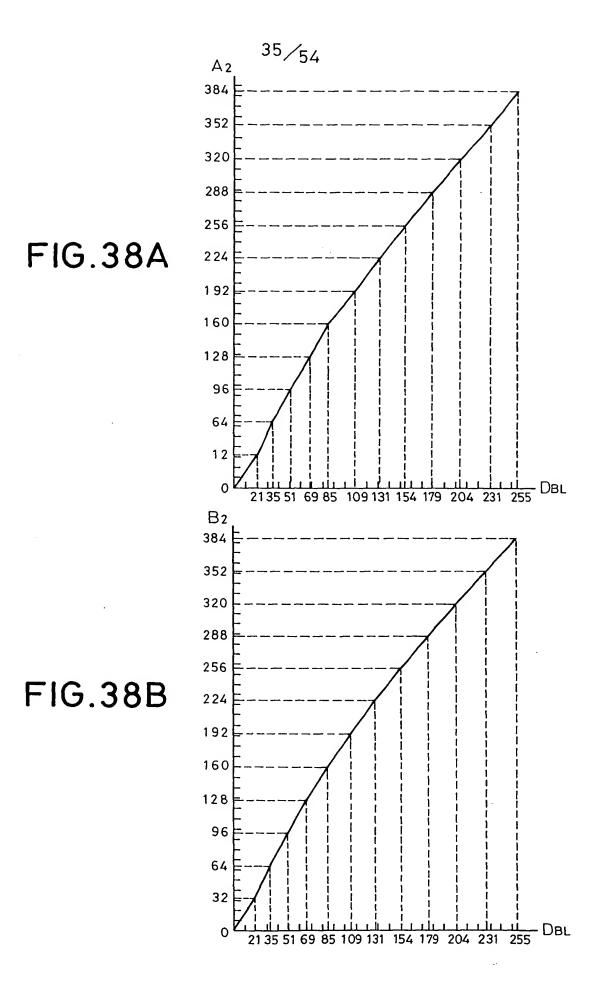


FIG.37B





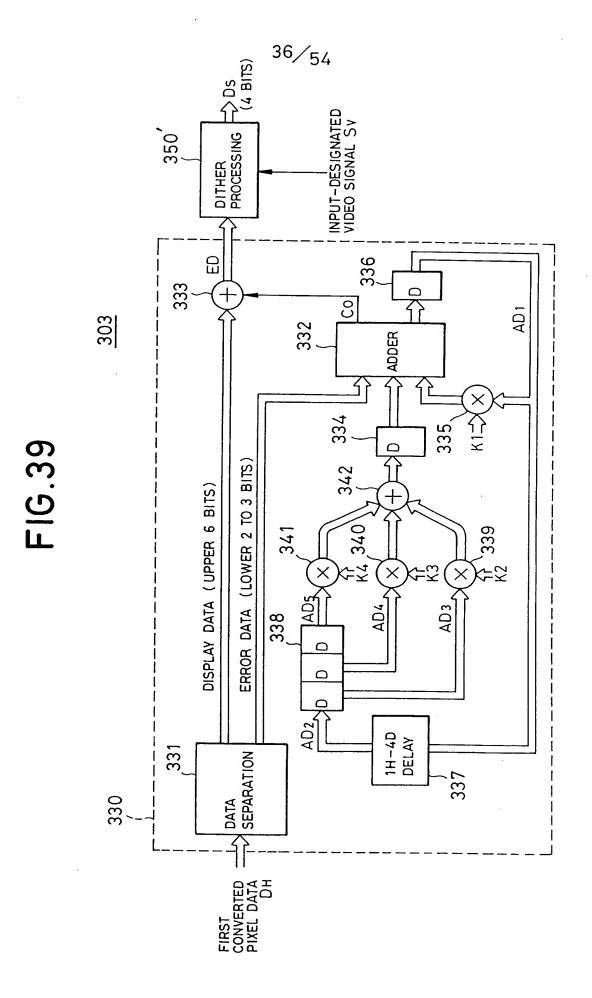


FIG. 40

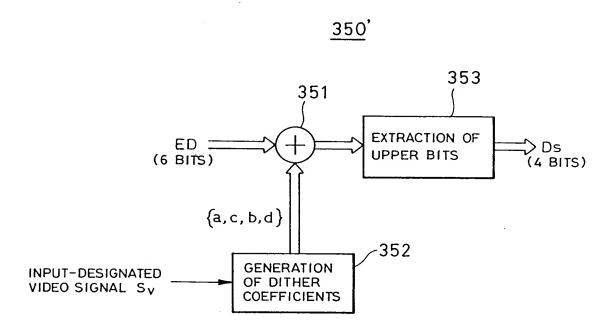


FIG. 41

INPUT VIDEO SIGNAL	DITI	HER COEFF	FICIENT	
VIDEO SIGNAL	a	b	С	d
TV SIGNAL	0	1	2	3
PC VIDEO SIGNAL	0 (1)	2 (3)	4 (5)	6 (7)

FIG. 42

SELECTIVE ERASING

CONVERSION TABLE OF THE SECOND DATA CONVERTER 24 2 3 4 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 9 9 9 9 9 9 9 9 9	91	GRAY SCALE	ALE) :																									
Day		CON	ÆRS	NO	TAB	LE 0	별	IE SE	000	N O	ATA	Ö	VEF	TES .													DISP	LAYB	RIGHT	NESS
Day	_		-											ير. پ		유	EM	SSIO	Ņ	3NE	PAT	TER	z				2		PC	VIDEO
0000 1 2 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 11 12 3 4 5 6 7 8 9 10 10 0 <t< td=""><td></td><td>Č</td><td></td><td></td><td></td><td></td><td></td><td></td><td>99</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>1</td><td>!</td><td>1</td><td>!</td><td>SIGN</td><td>₹.</td><td>SIGN</td><td>₹</td></t<>		Č							99														1	!	1	!	SIGN	₹.	SIGN	₹
0000 1 0		3 		7																			ညှိ စ	² €	₹ †	7 2 7	P P			
0001 0	1		-	0	0	0		0	0	0																	0			0
0011 0 0 0 1 0 0 0 0 0 0 0 0 0 0 0 0 0	2		0	_	0	0	0	0	0	0			0		$\overline{\mathcal{O}}$		_										7	-	-	
0011 0	က		0	0	7	0	0	0	0	0	0	0	0		\overline{O}	\overline{O}	•										4	ო	ო	က
0100 0	4		0	0	0	_	0	0	0	0		0	0	0	0	Ō	0										9	7	7	7
0101 0	Ω.			0	0	0	_	0	0	0	_	0	0	0	0	Ó	0	0	lacktriangle								18	13	4	13
0110 0	9		0	0	0	0	0	~-	0	0	_	0	0	0	0	O	0	0	0								29	23	22	23
1000 0	_		0	0	0	0	0	0	~-	0	0	0	0	0	0	Ó	0	0	0	0	lacktriangle						46	37	39	37
1000 0	∞		0	0	0	0	0	0	0	_	0	0	0	0	0	\circ	0	0	0	0	0	lacktriangle					68	26	29	56
1001 0	<u>ნ</u>		0	0	0	0	0	0	0	0	~	0	0	0	0	0	0	0	\circ	0	0	\circ	•				96	8	8	81
1010 0 0 0 0 0 0 0 0 0 0 0 1 0 0 0 0 0	7		0	0	0	0	0	0	0	0	0	_	0	0	0	\circ	0	0	\bigcirc	0	0	0	0	•			131	112	117	112
1011 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0			0	0	0	0	0	0	0	0	0	0	~	0	<u>O</u>	\circ	0	0	0	0	0	0	0	0	•		174	151	157	151
1100 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	12		0	0	0	0	0	0	0	0	0	0	0	~	0	\circ	0	0	0	0	0	0	0	0	0	•	225	198	205	198
	5		0	0	0	0	0	0	0	0	0	0	0	0	의	0	0	0	0	0	0	\circ	0	_	0	0	255	255	255	255

BLACK CIRCLES: SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES: LIGHT-EMITTING STATE

Νc

ŏ

<u>ပ</u>

Μc

ಜ

40/54

FIG. 43

F1G.44A

77	SF1	SF2	SF3	SF4	SF5	SF6	SF1 SF2 SF3 SF4 SF6 SF7 SF8 SF9 SF10 SF11 SF12	SF8	SF9	SF10	SF11	SF12
MODE 1	2	2	9	∞	8 11 17	17	22	28	32	73	12	30
MODE 2	7	7	12 16 22	16	22	34	77	56	02	86	102 60	09
MODE 3	9	9	18	18 24 33	33	51	99	84	105 129		153	06
MODE 4	ω	8	24	32	77	68	88	112	140	112 140 172 203		120

ODD FIELD (A)

FIG. 44B

/ C 7	SF1	SF1 SF2 SF3	SF3	SF4	SF5	SF4 SF5 SF6 SF7 SF8 SF9 SF10 SF11 SF12	SF7	SF8	SF9	SF10	SF11	SF12
MODE 1	-	2	7	9	10	10 14 19 25	19	25	31	39	27	57
MODE 2	2	7	8	12	20	28	38	20	62	78	78 94 114	114
MODE 3	က	9	12	138	30	42	57	75	93	117 141	141	171
MODE 4	7	8	16 24	24	07	56	92	100 124 156 188	124	156	188	228

EVEN FIELD (B)

FIG. 45A


)) 	SF1	SF2	SF3	SF4	SF5	SF6	SF7	SF8	SF9	SF2 SF3 SF4 SF5 SF6 SF7 SF8 SF9 SF10	SF11 SF12	SF12
MODE 1	-	2	7	2	11 14	14	20	25	33	07	87	50
MODE 2	2	7	8	14 22	22	28	40	20	99	80	96	9
MODE 3	3	9	12	21	33	42	09	75	66	99 120 144 150	144	150
MODE 4	7	8	16	28	77	56	08	100 132	132	160 192	192	200

ODD FIELD (A)

FIG.45B

	SF1 SF2 SF3 SF4 SF5 SF6 SF7	SF3	SF4	SF5	SF6	SF7	SF8 SF9 SF10 SF11	SF9	SF10	SF11	SF12
2		7	9	10	10 14 19 25	19		31	39	47	57
8 7	3	8	12	20	28 38	38	20	62	78	94	114
6 12	12		12 18	30	77	57	75	93	117 141	141	171
8 16	16		16 24	70	99	92	100 124	124	156	188	228

EVEN FIELD (B)

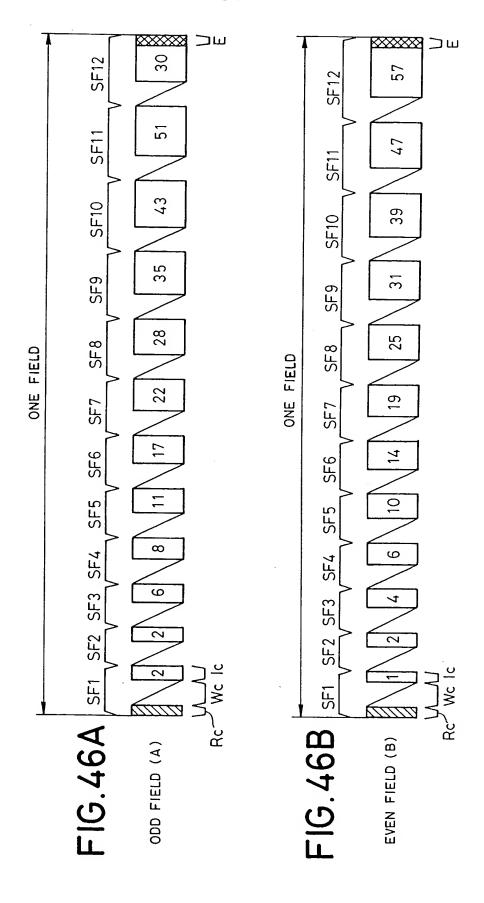


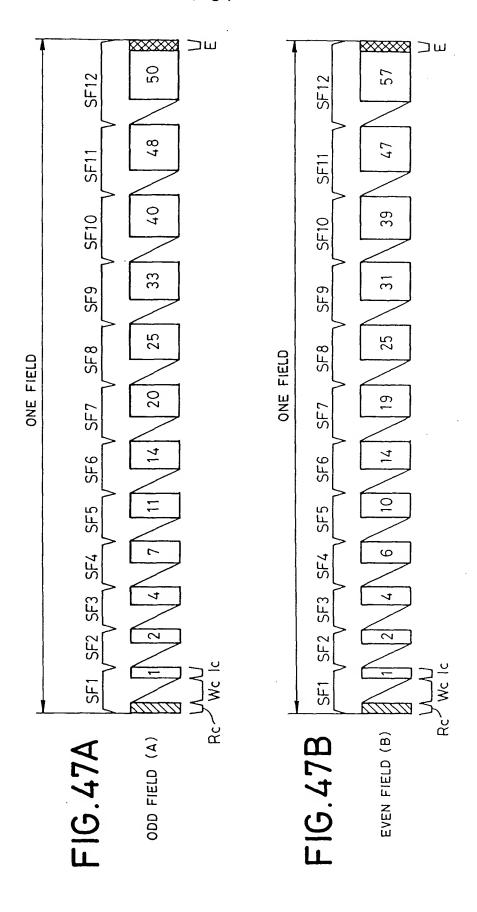


FIG. 48

DISPLAY BRIGHTNESS

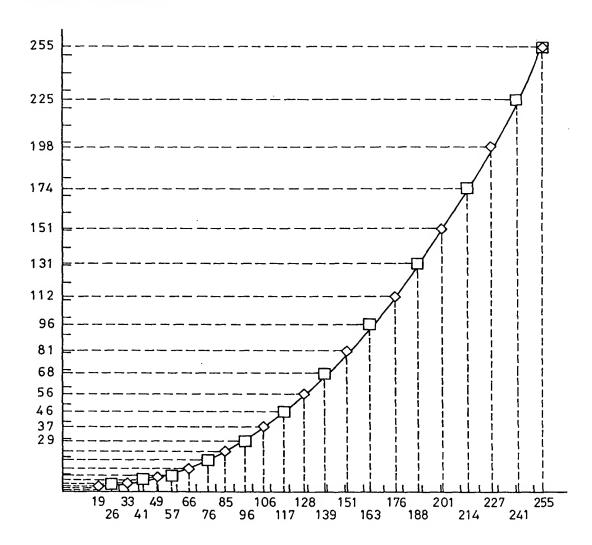

□: (A)

♦ : (B)


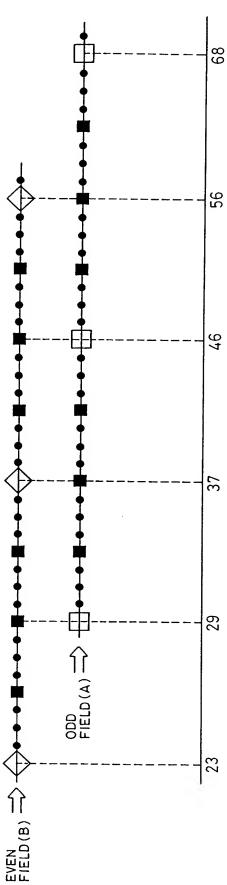


FIG. 49


DISPLAY BRIGHTNESS LEVEL


FIG. 50

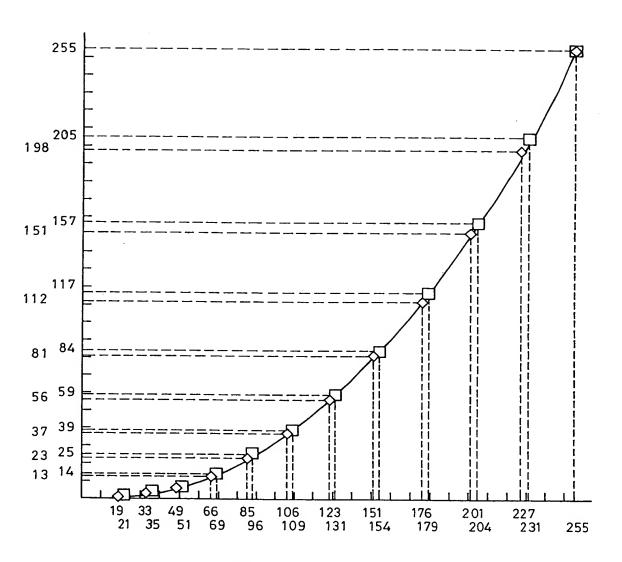

□: (A)

♦: (B)



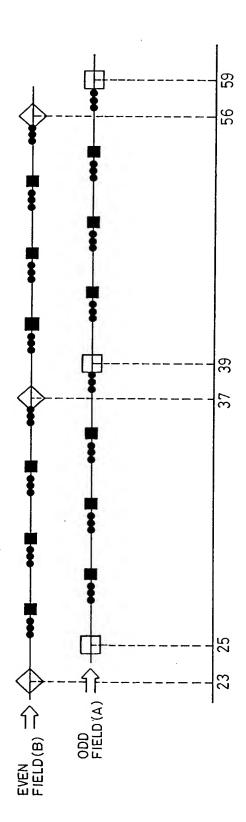

DISPLAY BRIGHTNESS LEVEL

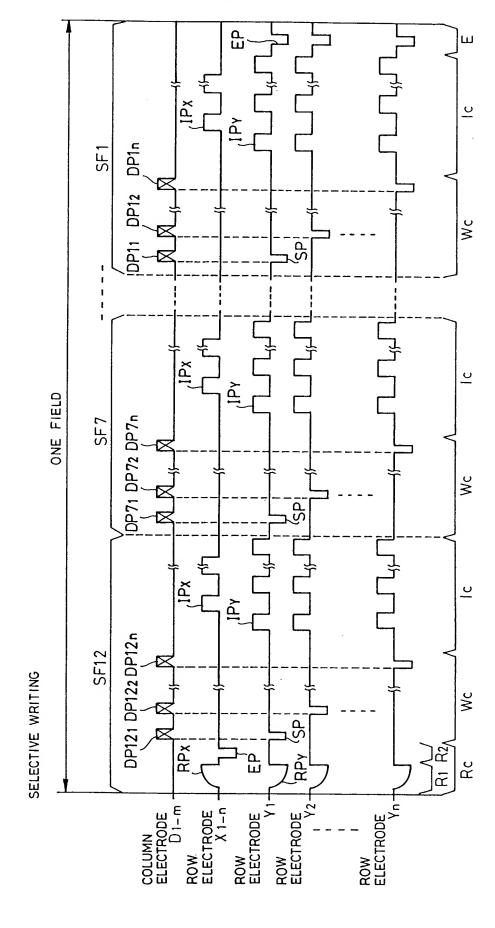
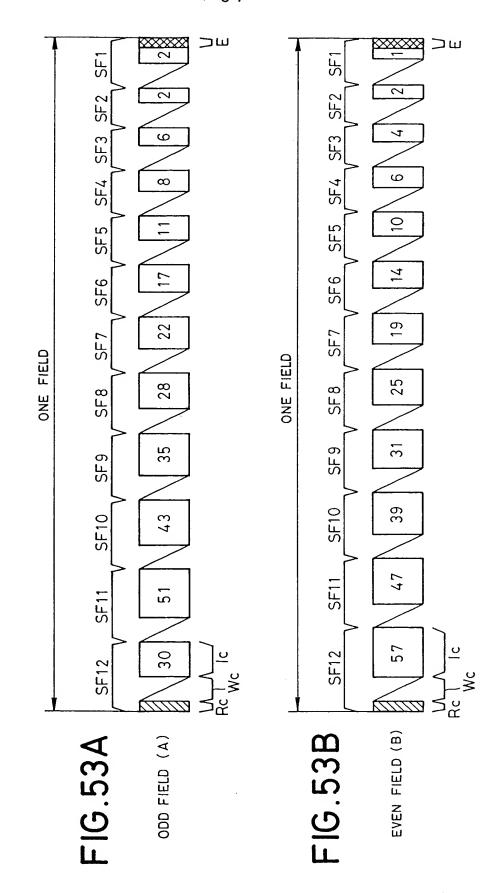


FIG.52



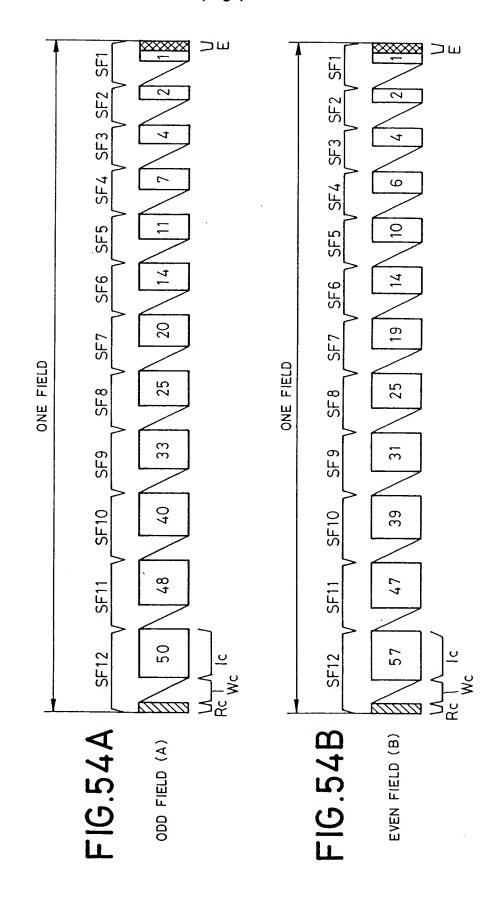


FIG.55

SELECTIVE WRITING

<u>ත</u> ්	GRAY SCALE	ALE																	
	CONVERSION TABLE OF THE SECOND DATA CONVERTER	ERSIC	N.	ABLE	: OF	置	SEC	NOS	D DA	TAC	Š	ÆRT	ER :			SIQ	DISPLAY BRIGHTNESS	RIGHT	NESS
_													34	LIGHT-EMISSION DRIVE PATTERN	TERN	≥		PC.	PC · VIDEO
	<u>د</u>						, O	G									SIGNAL	SIGNAL	귛
	3	12	11	9	တ	∞	7	9	5	4	က	7	_	St St St St St St St 12 11 10 9 8 7 6	SF SF SF SF SF SF 5F	F LA	L LB C EVEN	LA	LB
<u>_</u>	0000	0	0	0	0	0	0	0	0	0	0	0	0			0			
7	0001	0	0	0	0	0	0	0	0	0	0	0	_		•	2	_		+-
ო	0010	0	0	0	0	0	0	0	0	0	0	-	0		•	4	ო	က	က
4	0011	0	0	0	0	0	0	0	0	0	_	0	0		•) 10	7	7	
2	0100	0	0	0	0	0	0	0	0	_	0	0	0		000	18	13	14	13
9	0101	0	0	0	0	0	0	0	-	0	0	0	Ó		0000) 29	23	25	23
7	0110	0	0	0	0	0	0	_	0	0	0	0	0	•	00000) 46	37	39	37
ω	0111	0	0	0	0	0	-	0	0	0	0	0	0	•	00000	(88	26	29	56
6	1000	0	0	0	0		0	0	0	0	0	0	0	•	00000	96	81	\$	81
19	1001	0	0	0	~	0	0	0	0	0	0	0	0		00000	131	112	117	112
7	1010	0	0	_	0	0	0	0	0	0	0	0	0	0000	00000	174	151	157	151
12	1011	0	٠	0	0	0	0	0	0	0	0	0	0	00000	00000	225	198	205	198
13	1100	-	0	0	0	0	0	0	0	0	0	0	0	000000	00000	255	255	255	255

BLACK CIRCLES : SELECTIVE WRITE DISCHARGE (LIGHT-EMITTING STATE)
WHITE CIRCLES : LIGHT-EMITTING SF

FIG.56

SELECTIVE ERASING

CONVERSION TABLE OF THE SECOND DATA CONVERTER Ds	<u>i</u> io	GRAY SCALE	ALE	щ	<u>!</u>																						•		
Ds	\vdash	CONV	ERSI	NO NO	TABL	E OF	F	SE	NOS	0 0	TA (NO.	ÆRT	띪												DISP	LAYBI	RIGHT	NESS
Signature Sign	_													8	2	보	MISS	NOIS	DRI	VE P	ATT	RN				2		PC	/IDEO
1		č						Ü	Ö							1											Ŋ.	SIGN	¥
00001 1 1 2 3 4 3 3 3 3 3 4 3 3 3 3 3 4 3 4 3 4 3 3 3 4 3 4 3 3 3 4 3 4 3 3 3 4 3 3 3 3 4 3 3 3 3 4 3 3 3 3 4 3 3 3 3 3 4 3 3 3 3 4 3 3 3 3 4 <td></td> <td>ž</td> <td></td> <td>C</td> <td>~</td> <td>7</td> <td>ĸ</td> <td>່ ແ</td> <td>, ^</td> <td>α</td> <td>σ</td> <td>5</td> <td>7</td> <td>12</td> <td>도</td> <td>۲,</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>•</td> <td></td> <td></td> <td></td> <td>L B</td>		ž		C	~	7	ĸ	່ ແ	, ^	α	σ	5	7	12	도	۲,									•				L B
0000	\perp		+	4		+			-		9	2	-	4	-](4	ļ	1								+			EVEN
0001 0 1 1 * * * * * * * * * * * * * * *	~	0000	-	₹-	*	*	*	*	*	*	*	*	*	*		•	7]	•	•	•	•	•		-	0	0	0	0
0011 0 0 1 1	7	0001	0	_	_	*	*	*	*	*	*	*	*	*	0		•		7	•	•		•		•	7	-	-	<u>_</u>
0011 0 0 0 1 1 8 8 8 8 8 8 9 0 0 0 0 0 1 1 8 8 8 8 8 9 0 0 0 0 0 0 0 0 0 0 0 0 0 0	က	0010	0	0	-	~	*	*	*	*	*	*	*	*	0	0	•	7	7	•	7	•	•	•	•	4	က	က	က
0100 0 0 0 0 1 1 8 8 8 8 8 0 0 0 0 0 0 0	4	0011	0	0	0	~	~	*	*	*	*	*	*	*	0	0	0		7	7		7	7	7		10	7	7	7
0101 0 0 0 0 0 1 1 * * * * * * * 0 0 0 0	5	0100		0	0	0	~	~	*	*	*	*	*	*	0	0	Ö			7	7 <	7	•		•	18	13	4	13
0110 0 0 0 0 0 0 0 1 1 * * * * * O O O O O O O O O O O O O	9	0101	0	0	0	0	0	_		*	*	*	*	*	0	0	Ö	$\frac{1}{2}$			7	7		•		59	23	25	23
1000 0 0 0 0 0 0 0 0 1 1 * * * * O O O O O O O O O O O O O O	7	0110		0	0	0	0	0	~	_	*	*	*	*	0	0	Ö	\mathcal{C}	\sim			7	7	•	_	46	37	39	37
1000 0 0 0 0 0 0 0 0 0 1 1 * * * O O O O O O O O O O O O O O O	ω	0111	0	0	0	0	0	0	0		-	*	*	*	0	0	Ŏ	\mathcal{C}	\bigcirc	$\tilde{\Box}$			7	7		68	56	59	26
1001 0 0 0 0 0 0 0 0 0 1 1 * OOOOOOOOO00 1 1 1 1 1 1 1 1 1 1 1 1 1 1	6	1000	0	0	0	0	0	0	0	0	-	_	*	*	0	0	Ö	\mathcal{C}	\sim	$\tilde{\Box}$						96	81	84	81
1010 0 0 0 0 0 0 0 0 0 0 0 1 1 0 0 0 0	10		0	0	0	0	0	0	0	0	0		_	*	0	0	$\tilde{\circ}$	\bigcirc	\bigcirc	\sim					\triangleleft	131	112	117	112
1011 0 0 0 0 0 0 0 0 0 0 0 0 1 0 0 0 0	7-			0	0	0	0	0	0	0	0	0		-	0	0	$\tilde{\circ}$			\sim					•	174	151	157	151
1100 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	12		0	0	0	0	0	0	0	0	0	0	0	-	0	0	$\tilde{\circ}$		\bigcirc	\mathcal{C}	\bigcirc		\bigcirc	\circ	•	225	198	205	198
	13			0	0	0	0	0	0	0	0	0	0	0	0	0		\sim						_	_	255	255		255

BLACK CIRCLES: SELECTIVE ERASE DISCHARGE STATE WHITE CIRCLES: LIGHT-EMITTING SF

L	•)
(_)
Ī	l	_

ď	SEI ECTIVE WRITING	П ¥	TIE	Ċ																									
ਮ ਹ-	GRAY SCALE	ALE	-	2																									
	CONVERSION TABLE OF THE SECO	ERSI	NO	LABL	E OF	<u> </u>	SE(NOS	D DA	TAC	ND DATA CONVERTER	ŒRT	ER.												-	JISPL	AY BF	DISPLAY BRIGHTNESS	VESS
 													8	LIG	LIGHT-EMISSION DRIVE PATTERN	MIS	SION	DRI	VE F	ΑTT	ERA	_			1'-	2		PC · VIDEO	/IDEO
	č						တ	GD							Ĺ											SIGNAL		SIGNAL	4
	3	1	2	က	4	2	9	7	8	6	10	7	12	کړ 12	۲ ۲	수	<u>ე</u> ი	γ ω -	۲. ۲	ည်တ	ر ب ب	γ. γ.	ე ო	₹ 2 .:	4× −	LA ODD	LB EVEN	LA ODD	LB EVEN
~	0000	0	0	0	0	0	0	0	0	0	0	0	0													0	0	0	0
7	0001	0	0	0	0	0	0	0	0	0	0	0	-												•	7	-	_	_
က	0010	0	0	0	0	0	0	0	0	0	0	_	~												•	4	က	. ന	က
4	0011	0	0	0	0	0	0	0	0	0		~	*									_			<u> </u>	10	7	7	7
5	0100	0	0	0	0	0	0	0	0	~	τ-	*	*											>	<u> </u>	138	13	4	13
9	0101	0	0	0	0	0	0	0	_	~	*	*	*										>	>	$\overline{\triangleright}$	29	23	25	23
_	0110	0	0	0	0	0	0	_		*	*	*	*	ì								>	\ \triangle		<u>`</u>	46	37	39	37
∞	0111	0	0	0	0	0	_	_	*	*	*	*	*								>	>			$\frac{\bullet}{\triangleright}$	- 89	26	59	56
6	1000	0	0	0	0		~	*	*	*	*	*	*				_				>	>	>		<u> </u>	96	8	22	81
19	1001	0	0	0	~-	_	*	*	*	*	*	*	*						>	>	>	>			$\frac{1}{\Diamond}$	131	112	117	112
7	1010	0	0	_	_	*	*	*	*	*	*	*	*		_	•		>	>	<u>></u>	>	>	✓		$\frac{1}{2}$	174	151	157	151
12	1011	0			*	*	*	*	*	*	*	*	*	-	•		D	>	5	<u>></u>	N	<u></u>	✓	7	$\frac{\square}{\square}$	225	198	205	198
13	1100	~	←	*	*	*	*	*	*	*	*	*	*	•			>	>	>	>	>		\ \ \	<u>></u>	$\frac{2}{\Diamond}$	255	255	255	255